Yamaha 01V96

Requirements

- Small Audio Mixer Interface Software Option
- MIDIator Serial to MIDI Converter
- MIDI Interface Cables (x2)
- Serial Interface Cable (DB9 to DB25)

Port Connections

	Switcher		MIDIator
Serial Connection	REMOTE Port (DB9 female)	⇨	SERIAL Port (DB25 female)
	MIDIator		**Audio Mixer**
MIDI Connection	MIDI Out	⇨	MIDI In
	MIDI In	⇨	MIDI Out

Cable Connectors
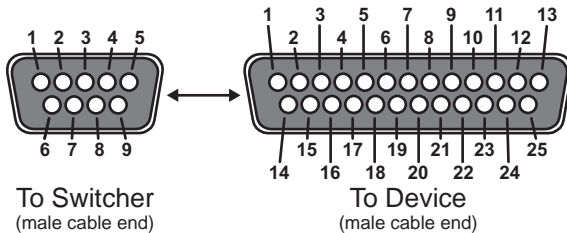
Figure 1 *DB9 to DB25 Cable*

Pinouts

Switcher	MIDIator
2 (Tx)	3 (Rx)
3 (Rx)	2 (Tx)
5 (Ground)	5 (Ground)

Switcher Setup

To Set Up Communications

1. Press **HOME ⇨ Setup ⇨ Installation ⇨ Com Setup ⇨ Type**.
   - Use the **Com Port** knob to select the **Remote X** port that you connected the MIDIator to.
   - Use the **Device** knob to select **Audio Mixer**.

2. Press **Select Device**.
   - Use the **Device** knob to select **Ya 01V96**.

3. Press **Com Type**.
   - Use the **Type** knob to select **RS-232** (**RS-232 NULL** on the **Synergy 1**).

4. Press **Com Settings**.
   - Use the **Baud** knob to select **38400**.
   - Use the **Parity** knob to select **NONE**.

5. Press **Extra Options**.

Extra Options	Value
Converter	MIDIator
Mixers (ganged together)	1 (default)
Version (of 01V96)	1 (default)
Post-fade delay	5 (default)

6. Press **HOME ⇨ Confirm**.

To Assign Audio Channels to BNCs

1. Press **HOME ⇨ Setup ⇨ Installation ⇨ BNC ⇨ Audio**.

2. Use the **BNC** knob to select the Input BNC that you want to assign an audio channel to.

3. Use the **Audio 1** knob to select an audio channel, or group, that you want to assign to the selected Input BNC.

4. Use the **Audio 2** knob to select another audio channel, or group, that you want to assign to the selected Input BNC.

5. Press **HOME ⇨ Confirm**.

Refer to your switcher manual for information on creating audio groups, or setting default audio levels.

Device Setup

1. Press the **DIO/SETUP** function button in the **Display Access Group** to display the **DIO/SETUP Menu**.

2. Press the **MIDI/HOST** tab to display the **MIDI I/O HOST SETUP Menu**.

3. Use the **Cursor** buttons to navigate to the following (you will have to press **ENTER** after each selection):
   - Tx PORT - Use the Parameter Dial to set this to **MIDI**.
   - Rx PORT - Use the Parameter Dial to set this to **MIDI**.

4. Press the **MIDI** function button in the **Display Access Group** to display the **MIDI Menu**.

5. Press the **SETUP** tab to display the **MIDI SETUP Menu**.

6. Use the **Cursor** buttons to navigate to the following (you will have to press **ENTER** after each selection):

- Tx CH - Use the Parameter Dial to set this to **1**.
- Rx CH - Use the Parameter Dial to set this to **1**.

Note: *If you are ganging multiple audio mixers, you must set the second Audio Mixer to **Tx CH 2** and **Rx CH 2**.*

- Set the remaining parameters as indicated:

Setting	Tx	Rx	OMNI	ECHO
Program Change	ON	ON	OFF	OFF
Control Change	OFF	OFF	OFF	--
Param Change	ON	ON	--	OFF
Bulk	--	OFF	--	--
Other Commands	--	--	--	OFF

- Fader Resolution - Use the Parameter Dial to set this to **LOW**.

Compatibility

Audio Mixer	Version
Yamaha 01V96	--
Switchers	
Synergy 1 SD	--
Synergy Series SD	12.0 or higher
Synergy MD/X	6.0 or higher
Vision MD/X	8.2 or higher
Vision QMD/X	8.2 or higher
Vision MultiPanel Support	--
Automation	
OverDrive	2.0 or higher
Port Expanders	
BSS4	✔
Comtrol DeviceMaster	✔

Video Production Technology