


XPression

Basic Cabling

⚠ CAUTION: Before you set up and operate this product, see the “Important Safety Instructions” in your Manual.

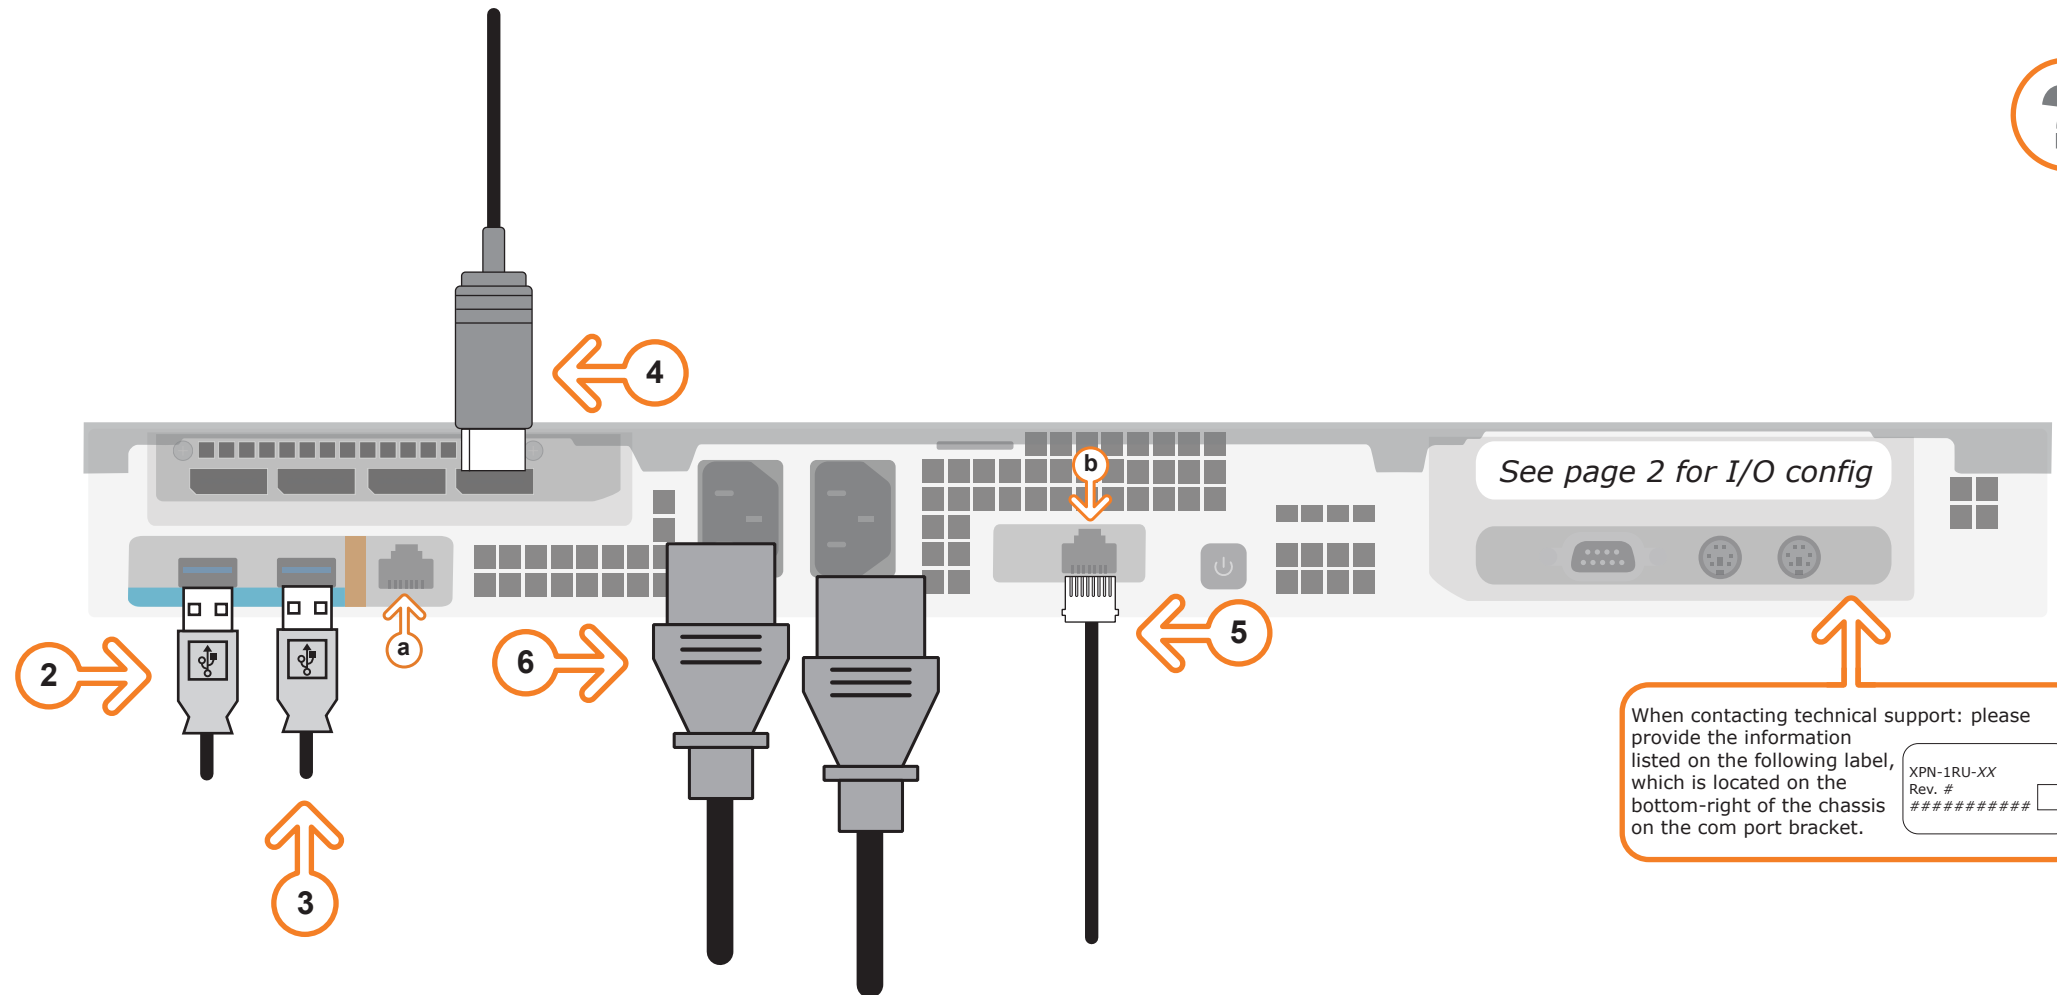

Need Help?

Technical Support:
1-844-652-0645 (North America)
+800 1005 0100 (International)
Email: techsupport@rossvideo.com

- 1 Use the supplied Rack Mount Kit to mount the XPression system in a 19" EIA equipment rack.
For information on installing the XPression chassis in a rack, see the provided document “Installing the Chassis in a Rack”.
- 2 Plug the supplied Keyboard into one of the **USB** ports.
- 3 Plug the supplied Mouse into one of the **USB** ports.
- 4 Connect a Monitor (customer supplied) to any of the four display ports.
KVM extenders (customer supplied) are required when the XPression system monitor, keyboard, and mouse are located remotely from the rack room.

- 5 Plug an Ethernet cable from your Local Area Network into either the **1G (a)** or **10G (b) Ethernet** port.
XPression systems can be connected to the Internet or restricted production network. The network connection is also used to distribute assets and for the RossTalk/Smart GPI feature.
- 6 Connect power cords from the AC ports on the XPression system to the mains power.
XPression system power supplies are auto-sensing and can use either 110 VAC or 220 VAC.


Continued on other side...

Card Cabling

To connect the 12G LE5:

- 1 Connect the HD-BNC end of the pigtail cables to the HD-BNC connectors and attach the SDI cables to the BNC end of the pigtails according to their required destination (see the *XPression User Guide* or Help file for information about configuring the key and fill for the HD-BNC connectors).
See table to the right for I/O configuration.
- 2 Connect your house reference Genlock signal to the **REF** HD-BNC connector.

XPression systems accept analog blackburst or tri-level sync as reference inputs. Tri-level sync is recommended for HD installations.

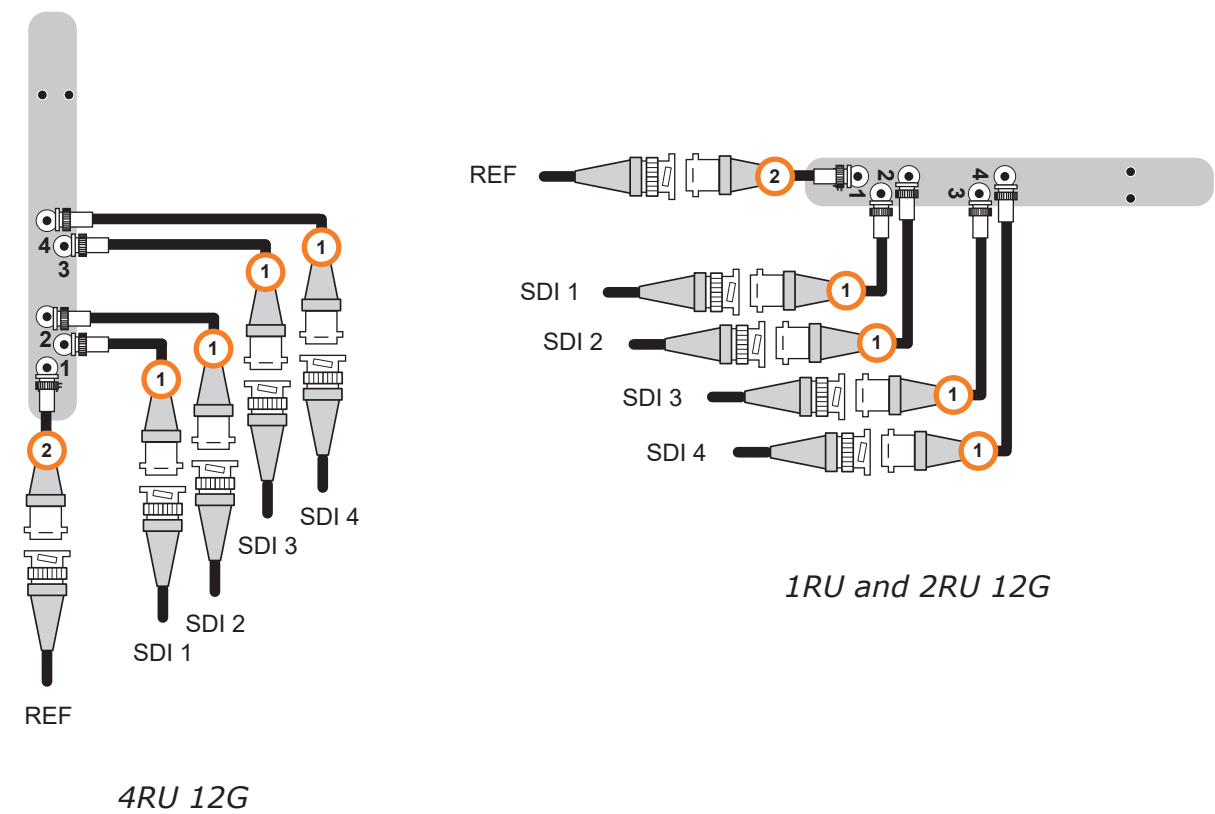

HD-BNC	4 Out (Default)	1 In, 3 Out	2 In, 2 Out	4 In
1	OUT 1 (FILL)	IN 1	IN 1	IN 1
2	OUT 1 (KEY)	OUT 1 (FILL)	IN 2	IN 2
3	OUT 1 (KEY)	OUT 1 (KEY)	OUT 1 (FILL)	IN 3
4	OUT 1 (FILL)	OUT 2 (FILL)	OUT 1 (KEY)	IN 4

To configure the 12G LE5:

- 1 Stop all applications using the Matrox card and ensure the card is installed.
- 2 In the **Command Prompt**, type the following to get to the directory:
`cd C:\Program Files\Matrox DSX-TopologyUtils\drivers`
- 3 Then type:
`mvConnectorConfig.exe load
-f=Xmio5Le5ConnectorMapping\Dsxle5lp\Pinout_XiYo.pin -sn=XXXXXXX.`
- 4 Replace **Pinout_XiYo.pin** with the **.pin** file you want to use (for example, **dsxle5lp_4_02i02o.pin** provides 2 inputs and 2 outputs).
- 5 Replace the **XXXXXXX** with the serial number of the Matrox card.
To find the serial number, open the **Matrox X.info** app, select **Hardware** from the drop-down and look at the hardware information.
The final **mvConnectorConfig** command line should like something like this:
`mvConnectorConfig.exe load
-f=Xmio5Le5ConnectorMapping\Dsxle5lp\dsxle5lp_4_02i02o.pin -sn=A572788`

To launch XPression:

- 1 Press the **Power** (⏻) button on the front of the XPression system.
Ross Video recommends shutting down XPression systems from the Windows operating system.
- 2 Click the XPression user account icon on the desktop.
- 3 Launch XPression from the **Start** menu.

For information on...

- operating XPression, see the "XPression User Guide" available in the C:\Archive folder
- maintenance of the XPression system, see the "XPression Maintenance Guide" in the C:\Archive folder
- other XPression features and functions, see the documents available in the C:\Archive folder