



Read the user documentation for your NRG router before starting work or operating equipment.

### Rack Mounting

1

Mount the router in the rack frame by means of four rack screws fastened through the front mounting ears.



**CAUTION:** Adequate ventilation within a rack frame must be maintained. Ensure side to side ventilation is not compromised. Refer to the *NRG Installation Guide* for more information.

### 1GbE Network Cabling

2

#### LAN or Network 1GbE Connections

2a Plug an Ethernet cable from your network into the **ETH 1** port. This is the primary network connection for the router.

2b Plug an Ethernet cable from your network into the **ETH 2** port. This is the backup network connection for the router. (optional)

*Note:* The router must be connected to the same network as the other devices in your routing system.

### Reference Cabling

3

3a Connect a 75ohm coaxial cable with HD-BNC connectors between the video reference signal output and the top **REF** port on the NRG.

3b Use a 75ohm coaxial cable with HD-BNC connectors to connect the **LOOP** port on the NRG to the next device in the system **or** terminate using an 75ohm HD-BNC terminator, if end of reference link.


### Source Cabling

4

4a Connect a 75ohm coaxial cable with HD-BNC connectors between a source device and an **INPUT** connector on the back panel of the NRG router.

4b Ensure the bayonet connector is locked in place correctly.

4c Repeat for additional source devices.

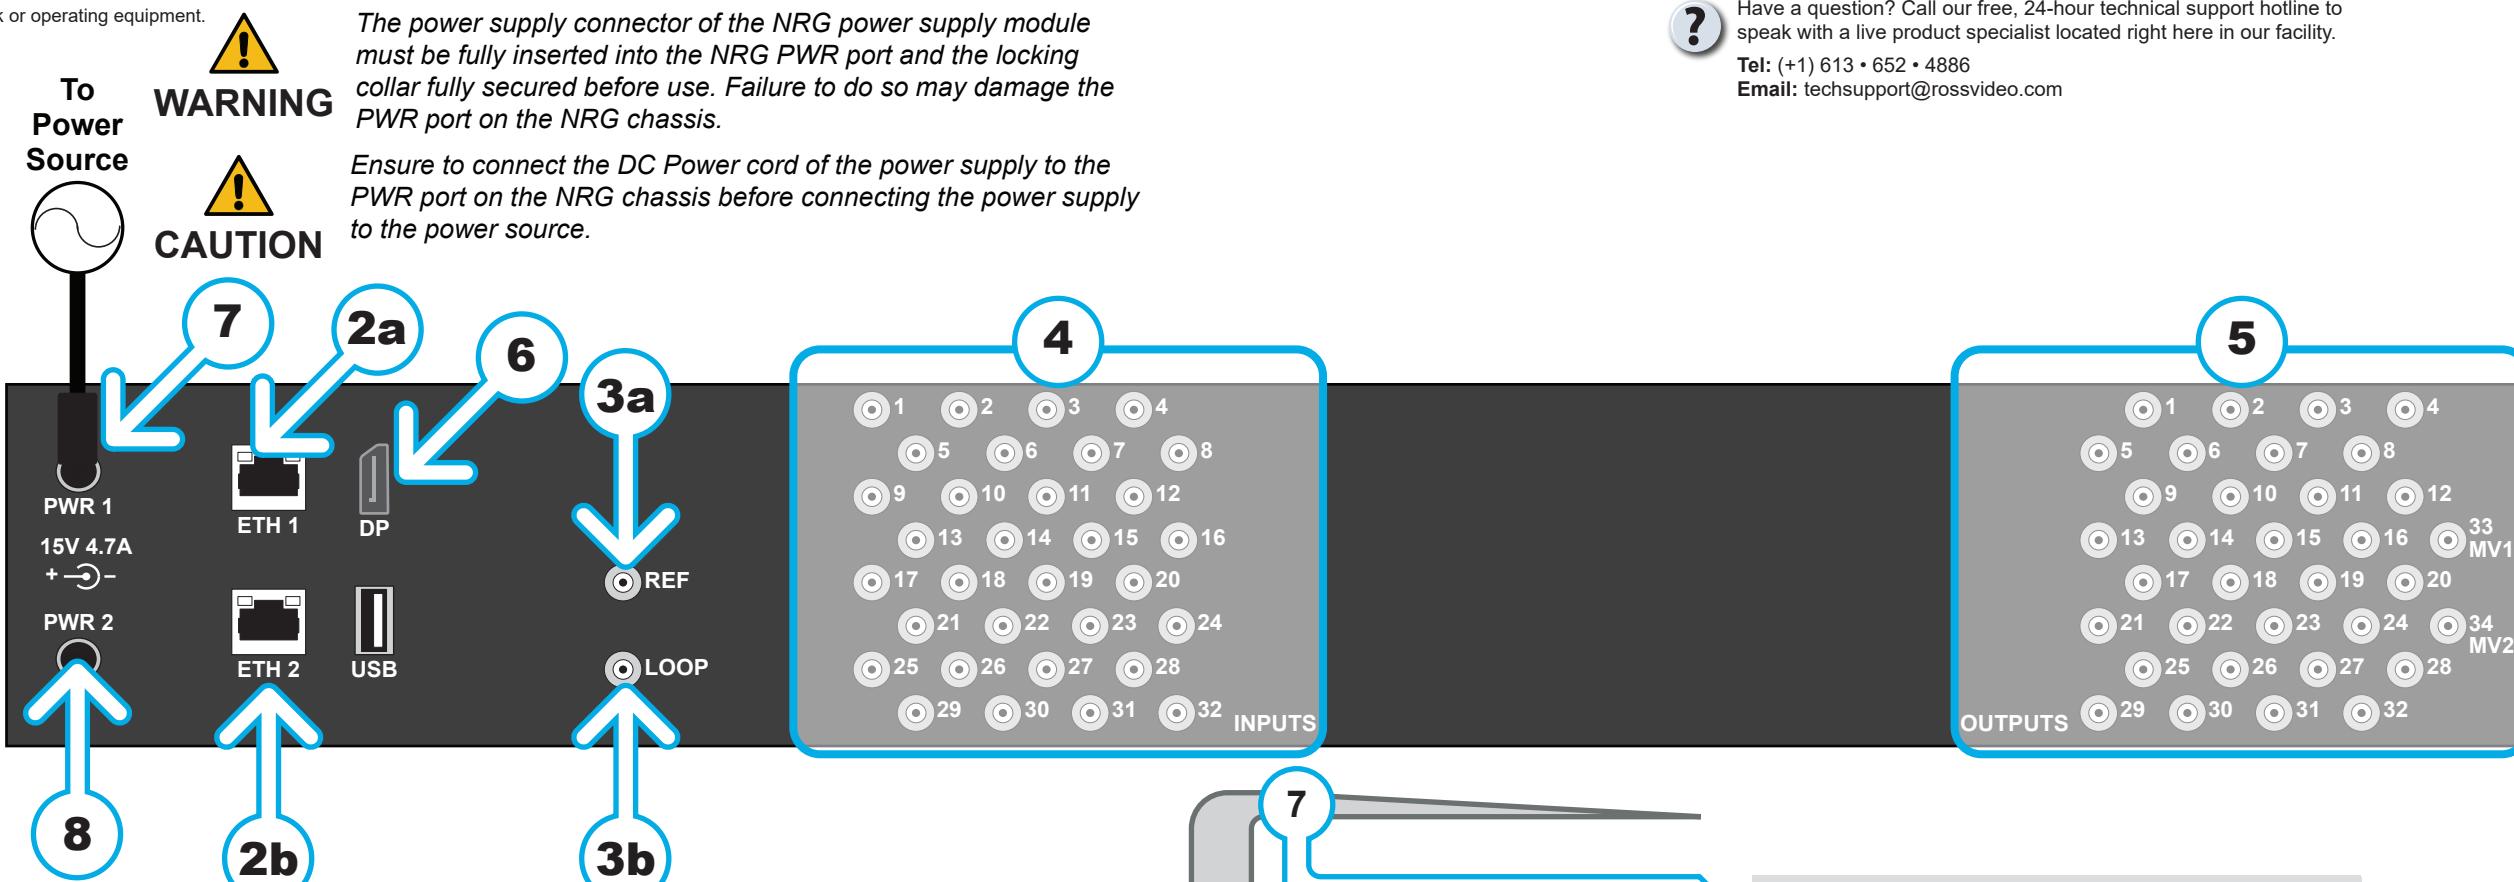

Have a question? Call our free, 24-hour technical support hotline to speak with a live product specialist located right here in our facility.

Tel: (+1) 613 • 652 • 4886  
Email: [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)

### Maximum Input Power Consumption

NRG-FR2	56.6W max.	3.77A	15V
NRG-FR2-LCP	64.0W max.	4.27A	15V

For the latest power numbers for your configuration, refer to the Ross Configuration Tool on our website.

5a Connect a 75ohm coaxial cable with HD-BNC connectors between a destination device and an **OUTPUT** connector on the back panel of the NRG router.

5b Ensure the bayonet connector is locked in place correctly.

5c Repeat for each additional destination device.

6 Connect a cable to the **DP** port that supports DisplayPort v1.2A. If a reference is not connected to the NRG, the Multiviewer Head output on the **DP** port outputs 1080p 59.94Hz (NTSC) or 1080p 50Hz (PAL) by default. To connect the **DP** port to a 1080p 60Hz monitor, a reference must be first connected to the NRG (see step 3). For **DP** port monitoring, ensure the monitor supports the routed format. Refer to the *NRG Installation Guide* for more information.

7a Connect the male end of the power cable to the **PWR 1** socket.

7b Connect the other end of the power cable to the power supply unit.

7c Connect the power supply to a suitable AC mains supply.

**NOTICE:** The NRG router does not have a power switch. The NRG router automatically powers on when AC power is applied.

8a Connect an additional power supply unit to the **PWR 2** socket.

8b Connect the cable from the second power supply to a suitable AC mains supply.

8c Connect the power supply to a suitable AC mains supply.

9a Launch DashBoard on your PC desktop.

9b Select **File > Show Walkabout**.

9c Click **Refresh**.

9d Locate the NRG in the **Walkabout** table.

9e Use the **Address** field to specify the IP address. The default is 192.168.20.141. *Note:* The NRG does not support Unicode characters.

9f Click **Reboot**.

9g Refer to the *NRG User Guide* for additional steps.