

**Streaming Gateway Cloud User Guide** 



# Thank You for Choosing Ross

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology.

Our mission is to:

- 1. Provide a Superior Customer Experience
  - offer the best product quality and support
- 2. Make Cool Practical Technology
  - · develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at *solutions@rossvideo.com*.



David Ross CEO, Ross Video dross@rossvideo.com

# Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

- 1. We will always act in our customers' best interest.
- 2. We will do our best to understand our customers' requirements.
- 3. We will not ship crap.
- 4. We will be great to work with.
- 5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
- 6. We will keep our promises.
- 7. We will treat the competition with respect.
- 8. We will cooperate with and help other friendly companies.
- 9. We will go above and beyond in times of crisis. *If there's no one to authorize the required action in times of company or customer crisis do what you know in your heart is right. (You may rent helicopters if necessary.)*

# Streaming Gateway Cloud · User Guide

Ross Part Number: 3900DR-514-01

· Revision: 1

• Release Date: June 12, 2025.

• Software Version: 4.0

The information contained in this Guide is subject to change without notice or obligation.

# Copyright

©2025 Ross Video Limited, Ross®, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Amazon Web Services, the "Powered by AWS" logo, and AWS are trademarks of Amazon.com, Inc. or its affiliates in the United States and/or other countries.

Microsoft®, Windows®, and Windows XP® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

NDI® is a registered trademark of Vizrt NDI AB.

VideoLAN, VLC, VLC media player and x264 are trademarks internationally registered by the VideoLAN non-profit organization.

## **Patents**

Patent numbers US 7,034,886; US 7,508,455; US 7,602,446; US 7,802,802 B2; US 7,834,886; US 7,914,332; US 8,307,284; US 8,407,374 B2; US 8,499,019 B2; US 8,519,949 B2; US 8,743,292 B2; GB 2,419,119 B; GB 2,447,380 B; and other patents pending.

# **Notices**

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

**Note:** As required by the GNU General Public License, and the Lesser GNU Public License (LGPL), source code can be obtained from Ross Video for at least 3 years. Contact Ross Video Technical Support for more information. If you have any questions or comments regarding this License Agreement, please contact:

Ross Video Limited 8 John Street P.O. Box 220 Iroquois, ON Canada K0E 1K0 techsupport@rossvideo.com

# Software Licenses

This product may use one or more software components subject to licenses. Refer to "**Third Party Licenses**" for a complete list of licenses that apply to this product.

# **Company Address**



## **Ross Video Limited**

8 John Street Iroquois, Ontario Canada, K0E 1K0

### **Ross Video Incorporated**

P.O. Box 880 Ogdensburg, New York USA 13669-0880

General Business Office: (+1) 613 • 652 • 4886

Fax: (+1) 613 • 652 • 4425

Technical Support: (+1) 613 • 652 • 4886

After Hours Emergency: (+1) 613 • 349 • 0006

E-mail (Technical Support): techsupport@rossvideo.com E-mail (General Information): solutions@rossvideo.com

Website: http://www.rossvideo.com

# **Contents**

Introduction	7
Related Publications	
Documentation Conventions	
Interface Elements	
User Entered Text	
Referenced Guides	
Menu Sequences	
Important Instructions Contacting Ross Video Technical Support	
Contacting Ross video recrinical support	
Before You Begin	g
Features	<u>C</u>
DashBoard Interfaces	<u>C</u>
Configuration Overview	
Create and Connect to an EC2 Instance on AWS	
Add the EC2 Instance to the DashBoard Tree View	
Connect to an NTP Server	
Configure the Sources	
Configure the Destinations	
Enable the Connections	10
Getting Started	11
Additional Software	11
Overview	
Create and Connect to an EC2 Instance on AWS	12
Upload and Run the SSG Installer	
Retrieve the IP Address of the EC2 Instance	
Install DashBoard	
Add the EC2 Instance as a Device to the DashBoard Tree View	14
Licensed Features	15
Overview	
Product Keys Overview	
Installing a Product Key	
Uninstalling a Product Key	
,	
Using DashBoard	17
Accessing the System Interfaces in DashBoard	
Accessing the SSG Interfaces in DashBoard	
Upgrading the Software	21
Configuring the NTP Settings	22
Configuring the NTP Settings	
Componing the IVIT Settings	22
Configuring the Source for a Connection	24
Overview	24
Configuring the NDI Global Source Discovery	24
Specifying an NDI Stream as a Source	

Configuring the Destination for a Connection	27
Before You Begin	27
Assigning an SRT Stream as the Destination	27
Connection Management	31
Before You Begin	_
Enabling a Connection	، د
Disabling a Connection	
Editing an Existing Connection	
Deleting a Connection	
Troubleshooting	
DashBoard Interface Overview	34
System Interfaces	34
Licensing Tab	
Timing Tab	35
Features Tab	37
About Tab	
SSG Interfaces	
Connections Control Tab	
Source Configuration Tab	
Destination Configuration Tab	
Configuration Tab	48
Third Party Licenses	50
Glossary	62

# Introduction

This guide covers the installation, configuration, and use of the softGear Streaming Gateway on an AWS™ EC2 instance. The following chapters are included:

- "Introduction" summarizes the guide and provides important terms, and conventions.
- "Before You Begin" summarizes the features of the Streaming Gateway and provides a workflow example for the Streaming Gateway integration.
- "Getting Started" provides the software requirements, installation instructions for the Streaming Gateway and DashBoard, and instruction on connecting DashBoard to the Streaming Gateway.
- "Licensed Features" outlines the available software licensed features, and how to manage your software keys for licensed features.
- "Using DashBoard" provides instructions for launching DashBoard, and accessing the Streaming Gateway interfaces in DashBoard.
- "Configuring the NTP Settings" provides instructions for configuring the Streaming Gateway for communication with your facility NTP server.
- "Configuring the Source for a Connection" outlines how to configure a source by assigning an NDI stream as a source.
- "Configuring the Destination for a Connection" outlines how to configure a destination by assigning an SRT stream as a destination.
- "Connection Management" outlines how to enable a connection, edit an existing connection, disable a connection, and delete a connection.
- "DashBoard Interface Overview" summarizes the menus and parameters of the Streaming Gateway tabs in DashBoard.
- "Third Party Licenses" contains licenses for third party libraries that are used in the softGear Streaming Gateway.
- "Glossary" provides a list of terms used throughout this guide.

# **Related Publications**

It is recommended to consult the following Ross documentation before installing and configuring your Streaming Gateway:

• DashBoard User Manual, Ross Part Number: 8351DR-004

# **Documentation Conventions**

Special text formats are used in this guide to identify parts of the user interface, text that a user must enter, or a sequence of menus and sub-menus that must be followed to reach a particular command.

## **Interface Elements**

Bold text is used to identify a user interface element such as a dialog box, menu item, or button. For example:

In the **Network** tab, click **Apply**.

#### **User Entered Text**

Courier text is used to identify text that a user must enter. For example:

In the Language box, enter English.

#### **Referenced Guides**

Text set in bold and italic represent the titles of referenced guides, manuals, or documents. For example:

For more information, refer to the **DashBoard User Manual**.

# **Menu Sequences**

Menu arrows are used in procedures to identify a sequence of menu items that you must follow. For example, if a step reads "**File** > **Save As**," you would click the **File** menu and then click **Save As**.

# **Important Instructions**

Star icons are used to identify important instructions or features. For example:

**★** Contact your IT department before connecting to your facility network to ensure that there are no conflicts.

# **Contacting Ross Video Technical Support**

At Ross Video, we take pride in the quality of our products, but if problems occur, help is as close as the nearest telephone.

Our 24-hour Hot Line service ensures you have access to technical expertise around the clock. After-sales service and technical support is provided directly by Ross Video personnel. During business hours (Eastern Time), technical support personnel are available by telephone. After hours and on weekends, a direct emergency technical support phone line is available. If the technical support person who is on call does not answer this line immediately, a voice message can be left and the call will be returned shortly. This team of highly trained staff is available to react to any problem and to do whatever is necessary to ensure customer satisfaction.

• Technical Support: (+1) 613-652-4886

• After Hours Emergency: (+1) 613-349-0006

E-mail: <a href="mailto:techsupport@rossvideo.com">techsupport@rossvideo.com</a>
 Website: <a href="http://www.rossvideo.com">http://www.rossvideo.com</a>

# **Before You Begin**

The softGear Streaming Gateway is a transport converter with built-in micro-services. The Streaming Gateway allows you to transport content based on softGear™ micro-service architecture, and can run on an AWS EC2 instance.

If you have questions pertaining to the operation of the Streaming Gateway, contact us at the numbers listed in "Contacting Ross Video Technical Support".

## **Features**

The Streaming Gateway includes the following features:

- Support for MPEG2-TS over SRT transmission
- · Supports multiple resolutions and frame rates
- · NDI reception
- · Intuitive control and monitoring via DashBoard

# **DashBoard Interfaces**

The Streaming Gateway includes DashBoard interfaces for configuration and operation. The interfaces are accessed by expanding the Streaming Gateway node in the DashBoard Tree View and selecting the appropriate sub-node. The DashBoard client software enables you to monitor and control DashBoard Connect compatible devices from a computer.

#### For More Information on...

• displaying the DashBoard interfaces, refer to "Using DashBoard".

# **Configuration Overview**

**Figure 1** provides a generalized workflow of configuring your Streaming Gateway.

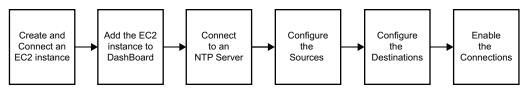


Figure 1 Configuration Workflow

### Create and Connect to an EC2 Instance on AWS

The Streaming Gateway operates as an EC2 instance as of version 4.0. There is no hardware to install and configure. You must install the Streaming Gateway as an AWS™ EC2 instance first. This requires you to:

- 1. Create a suitable Ubuntu 24.04 EC2 instance on AWS.
- Upload and install the SSG package.
- 3. Retrieve the IP address of the EC2 instance.

#### For More Information on...

creating and connecting to an EC2 instance, refer to "Getting Started".

### Add the EC2 Instance to the DashBoard Tree View

You must install the DashBoard software on your PC and manually add the EC2 instance to the Tree View. This will then provide you access to the Streaming Gateway interfaces.

#### For More Information on...

- installing the DashBoard software, refer to "Install DashBoard".
- adding the EC2 instance to DashBoard, refer to "Add the EC2 Instance as a Device to the DashBoard Tree View".
- the menus and parameters available in DashBoard, refer to "Using DashBoard" and "DashBoard Interface Overview".

#### Connect to an NTP Server

Once you can successfully access the Streaming Gateway in DashBoard, the next step is to establish a connection to an NTP Server. The Streaming Gateway requires an accurate time reference, in order to ensure correct watermarking and crediting. Refer to "Configuring the NTP Settings".

# **Configure the Sources**

Each source is configured independently, allowing you to assign NDI streams as the source for a connection. Once all the sources are configured, you can proceed to assign each source to an output (destination) to create a connection. Refer to "Configuring the Source for a Connection".

# **Configure the Destinations**

A destination is created by defining an output from the Streaming Gateway to a specific SRT destination. Each SRT destination is configured independently. Refer to "Configuring the Destination for a Connection".

#### **Enable the Connections**

The Streaming Gateway supports the workflow of receiving an NDI stream and transmitting an SRT video stream. Use the DashBoard interfaces to map a source to a destination, then enable the connection to output the SRT stream. This workflow requires you to:

- 1. Configure a source from an NDI peer. Refer to "To specify an NDI stream as a source".
- 2. Configure a destination to an SRT peer. Refer to "To assign an SRT stream as the destination".
- 3. Repeat steps 1 and 2 for each additional connection.
- 4. Enable each connection. Refer to "To enable a connection".

#### For More Information on...

• enabling a connection, refer to "Connection Management".

# **Getting Started**

This chapter provides the installation instructions for creating an AWS EC2 instance, installing the Streaming Gateway and DashBoard, and instructions on adding the EC2 instance to the Tree View in DashBoard.

If you have questions pertaining to the installation of the Streaming Gateway, contact us at the numbers listed in "Contacting Ross Video Technical Support". Our technical staff is always available for consultation, training, or service.

**★** The Streaming Gateway does not run as an application on your computer. Instead, it runs as a service that DashBoard connects to and presents the user interface for. DashBoard is required to operate the Streaming Gateway.

# Additional Software

In addition to the Streaming Gateway software, you should download and install the following software applications.

#### DashBoard

DashBoard is required to configure and use the Streaming Gateway. The latest version of DashBoard is available from our website.

#### NDI® Tools

The latest version of NDI® Tools can be found at ndi.tv. This suite is free to download and has been designed to introduce anyone, from end users to professional installers to the world of NDI® connectivity. Some NDI® configuration settings are performed using these tools and therefore should be installed for Streaming Gateway.

NDI® Tools is made up of several useful applications, including the following:

- NDI Studio Monitor for viewing NDI® video sources on your network.
- NDI Access Manager for managing visibility and accessibility of sources.
- NDI Test Patterns for generating reference signals.
- NDI Router for routing NDI® sources to custom outputs.
- NDI Bridge for sending and receiving sources beyond your local network.
- NDI VLC Plugin for generating NDI® sources from the VLC media player.

### NDI® SDK (NDI Discovery Server)

The NDI® SDK is available at ndi.tv and includes a number of useful utilities.

The NDI Discovery Server is designed to allow you to replace the automatic discovery NDI® uses with a server that operates as a centralized registry of NDI® sources.

Using a discovery server is as simple as running the application in Bin\Utilities\x64\NDI Discovery Service.exe. This application will then run a server on your local machine that accepts incoming connections with senders, finders, and receivers, and coordinates amongst them all to ensure they are all visible to each other.

Once NDI Discovery is running, configuration of each device on your network is made by checking the Discovery Server box and adding its IP Address within the NDI® Access Manager.

# **Overview**

This chapter outlines how to:

- 1. Create a suitable Ubuntu 24.04 EC2 instance on AWS (g4dn.4xlarge, 100GB disk).
- 2. Upload and install the latest SSG v4 package (ssg-<version>-<date>-<git hash>.install) on the instance.
- 3. Retrieve the IP address of the EC2 instance.
- 4. Install DashBoard on your Microsoft Windows machine.
- 5. Add the EC2 instance to the DashBoard Tree View.



**Notice** — Keep track of your credentials and IP addresses, and make sure to close any unused ports to maintain security. If you run into connectivity issues, double-check your AWS Security Group and local firewall settings.

## Create and Connect to an EC2 Instance on AWS

This section outlines how to log into the AWS Console, and launch a new EC2 instance.

#### To create an EC2 instance on AWS

- 1. Log into the AWS Console:
  - a. Use your browser to navigate to aws.amazon.com.
  - b. Log in with your AWS credentials.
- 2. In the AWS Management Console, select **Services** > **EC2**.
- 3. Launch an EC2 instance:
  - a. Click Launch Instances (or Launch Instance).
  - b. Use the **Name** and **Tags** fields to give your instance a descriptive name (e.g. ssg-instance).
  - c. Under **Application and OS images** (Amazon Machine Image), select **Ubuntu Server 24.04 LTS (HVM), SSD Volume Type**.
  - d. Set the **Instance** type to **g4dn.4xlarge** (as required).
  - e. Under **Key pair** (login), select an existing key pair or create a new one.
    - The key pair is required to connect via SSH.
  - f. Under **Network settings**, confirm the VPC and subnet are correct for your setup.
- **★** If you plan on connecting from the Internet, ensure you have a public IP or an Elastic IP available.
  - g. Under Configure storage, set the Root volume size to 100GB.
  - h. Review your settings.
  - i. Click Launch Instance.
- **★** For the Security group, Ports 22 (ssh), 5254, and any SRT port you wish to use should be allowed.
- 4. Wait for the Instance to Start.
  - AWS will provision the instance.
  - Once it is running, it will be reported in your EC2 Console with a status of Running.

#### To connect to your EC2 instance

- 1. Locate the Public IP or DNS:
  - a. In the **EC2 Management Console**, select your instance.
  - b. In the **Description** or **Details** pane, note the Public IPv4 address or the Public DNS.
- 2. SSH into the EC2 instance on your local machine (Mac/Linux) connect to the instance.

For example (Mac/Linux terminal):

```
ssh -m hmac-sha2-512 -i /path/to/your key pair.pem ubuntu@<Ec2-Public-IP-or-DNS>
```

- a. Replace /path/to/your\_key\_pair.pem with the path to your key file (from step 3e above).
- b. Replace <Ec2-Public-IP-or-DNS> with your instance's public address.

# **Upload and Run the SSG Installer**

This section requires you to use scp (Mac/Linux) or an SFTP client (Windows) to upload the file to your EC2 instance. Then you can prepare and run the SSG Installer.

# To upload the SSG Installer

- 1. Ensure the file **ssg-<version>-<date>-<git hash>.install** is on your local machine.
- 2. Transfer the Installer to EC2 using scp (Linux/Mac):

```
scp -o MACs=hmac-sha2-512 -i /path/to/your_key_pair.pem \
    ssg-<version>-<date>-<git hash>.install \
    ubuntu@<EC2-Public-IP-or-DNS>:~
```

- **★** This command uploads the file to your home directory on the EC2 instance.
- 3. Verify the file.
- 4. Log back into the EC2 instance.
- 5. To ensure the file is present, run one of the following:
  - ls -1 Or
  - ls -l ssg-<version>-<date>-<git hash>.install

#### To make the Installer executable

• Change the file permissions so the Installer can be executed:

```
chmod +x ssg-<version>-<date>-<git hash>.install
```

#### To run the Installer

run the script: sudo ./ssg-<version>-<date>-<git hash>.install

#### To confirm the installation

• Wait for the script to complete.

# Retrieve the IP Address of the EC2 Instance

This section outlines how to locate the IP address for your EC2 instance. This information is required to add the instance to the DashBoard interface.

#### To retrieve the IP address for your EC2 instance

- 1. Log into the AWS Console:
  - a. Use your browser to navigate to aws.amazon.com.
  - b. Log in with your AWS credentials.
- 2. In the AWS Console, select **EC2** > **Instances**.
- 3. Select your instance.
- 4. Make a note of the value reported in the **Details** > **Private IPv4 address** field.

# **Install DashBoard**

The installation wizard will enable you to install the DashBoard application on your PC. DashBoard will backup and restore your current settings if another version is already installed on the computer.

#### To install DashBoard

- 1. Launch the DB#.##.#\_setup\_64 installer on the PC you want to run the Streaming Gateway and follow the on-screen instructions.
- 2. Review the **End User Licensing Agreement (EULA)** and click **I Agree**.
- 3. Review the Eclipse Foundation Software User Agreement and click I Agree.
- 4. Select the components you want to install and click **Next**.
  - It is recommended to leave everything selected.
- 5. Select where you want the application to be installed and click **Next**.
  - You can either accept the default location or click **Browse** and select a new location.
- 6. Enter a name for the folder on the Start Menu that you want to use for the application.
- 7. Click **Install**.
- 8. Click **Finish** to complete the installation.

# Add the EC2 Instance as a Device to the DashBoard Tree View

You must manually add the EC2 instance to the Tree View. Once you add the EC2 instance to the Tree View, you can access the Streaming Gateway interfaces.

**★** Launch DashBoard from another instance running in the same VPC as the EC2 instance.

## To manually add the EC2 instance to the Tree View in DashBoard

 From the main toolbar in DashBoard, select File > New > TCP/IP DashBoard Connect or openGear Device.

The **New TCP openGear Frame Connection** dialog opens.

- 2. In the **IP Address** field, enter the IP address from "**To retrieve the IP address for your EC2** instance".
- 3. Click Detect Frame Information.
- **★** Use the **Display Name** field to assign a unique name for the EC2 instance.
- 4. Click **Finish** to close the dialog.
- 5. Verify that the **softGear Streaming Gateway** node displays in the DashBoard Tree View, along with the **System** sub-node below it.

# **Licensed Features**

The Streaming Gateway has software licenses for enabling functions and features. This chapter outlines the available software licensed features, and how to install a product key for a licensed feature.

★ Software licenses are managed and validated by a remote server. Contact Ross Technical Support for details on

# Overview

The Streaming Gateway provides floating licenses for cloud servers. Floating licensing is integrated with the Ross Platform Manager (RPM), and requires a constant connection with the RPM.

The Streaming Gateway re-activates licenses on a regular interval with the RPM. If an activation fails as a result of being unable to reach the RPM, the Streaming Gateway will start a 2-day grace period before terminating the features. During this time, the Streaming Gateway will operate as normal. A reboot will remove any Streaming Gateway grace period in effect and the Streaming Gateway will start without any features. If an activation fails as a result of the RPM being unable to reach the activation server, the RPM will start a grace period where the Streaming Gateway will be able to continue activating the licenses without issues. After the this grace period is over, the features will be terminated. The Streaming Gateway can be rebooted safely while the RPM grace period is in effect.

- **★** Contact Ross Technical Support for details on the Ross Platform Manager (RPM).
- ★ When the Streaming Gateway is rebooted or turned off, it will deactivate all of its licenses with the RPM.

# **Product Keys Overview**

The Streaming Gateway Licensing tab in DashBoard indicates the current state of each license. These fields will always be populated for a licensed system and warn the users of any changes or issues, such as licenses expiring soon (within a week), or if the connection between the Streaming Gateway and the RPM has been lost.

**★** Expired or invalid licenses will result in the immediate termination of all features.

**Table 1** provides a brief summary on the types of licensed features available for the Streaming Gateway.

Table 1 List of Streaming Cateway Licensed Features

	Tuble I List of Streaming duteway Licensea reatures	•
nse	Description	

License	Description
Platform	Basic license for the softGear product line
SG-SGW-NDI-1CH	Enables the Streaming Gateway to receive one network stream via the NDI protocol
SG-SGW-SRT-1CH	Enables the Streaming Gateway to transmit MPEG-TS streams via SRT protocol
Video Scaler	Enables the Streaming Gateway to change the video resolution and frame rate

# **Installing a Product Key**

Ross Video uses product keys to control user access to specific Streaming Gateway features. You can obtain a key for a Streaming Gateway licensed feature from Ross Video Technical Support.

# To install a Streaming Gateway Product Key

- 1. In the Basic Tree View of DashBoard, locate the softGear Streaming Gateway node.
- 2. Expand the **softGear Streaming Gateway** node.
- 3. Double-click the **System** sub-node.
- 4. Select the **Licensing** tab.
- 5. Enter the Product Key in the **Product Key** field.
- 6. Click Activate.
- 7. Verify that the **Status** field updates to Activation Successful and the Licensing Table populates. The **SSG** sub-node will now be available in the **Basic Tree View** of DashBoard under the **softGear Streaming Gateway** node.

# **Uninstalling a Product Key**

Whether your use of Streaming Gateway features has changed, or you are switching to using another Streaming Gateway instance, you will need to uninstall the product key that you were using.

# To uninstall a Streaming Gateway Product Key

- 1. In the **Basic Tree View** of DashBoard, locate the **softGear Streaming Gateway** node.
- 2. Expand the **softGear Streaming Gateway** node.
- 3. Double-click the **System** sub-node.
- 4. Select the **Licensing** tab.
- 5. Click **Deactivate**.
- 6. Click **Yes** when prompted.

The Product Key is now uninstalled.

# **Using DashBoard**

The Streaming Gateway interfaces and settings are accessed by expanding the main softGear Streaming Gateway node in the Tree View of DashBoard, and then selecting the appropriate sub-node. This chapter provides instructions for accessing the sub-nodes of the Streaming Gateway and their interfaces in DashBoard.

# **Accessing the System Interfaces in DashBoard**

The System interfaces are access via the System sub-node in the DashBoard Tree View. Double-clicking the System sub-nod displays a series of tabs in the right pane of the DashBoard window. Use the System interfaces to enable licensed features, connect to an NTP server, and monitor the read-only information about your system.

## To display the System interfaces in DashBoard


- 1. In the Basic Tree View of DashBoard, locate the softGear Streaming Gateway node.
- 2. Expand the **softGear Streaming Gateway** node.



3. Double-click the **System** sub-node.


The **Licensing** tab is automatically selected.

The **Licensing** tab provides options to manage the features that require a valid Product Key.

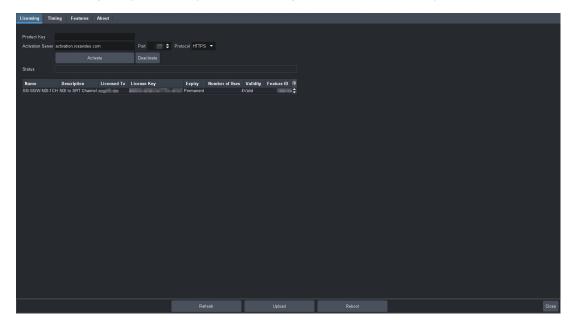


# 4. Select the **Timing** tab.

The **Timing** tab provides settings to connect to an NTP server to establish accurate timing.

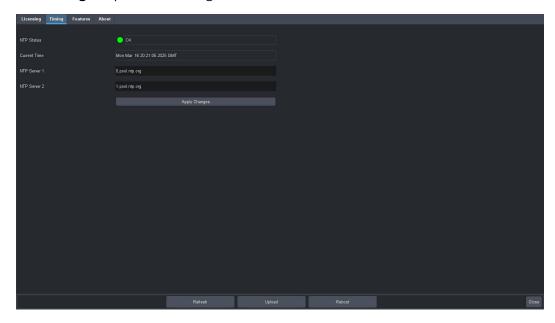


#### 5. Select the **Features** tab.

The **Features** tab provides read-only information on the running features.

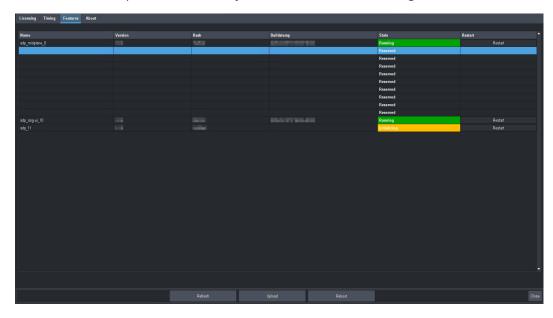

### 6. Select the **About** tab.

The **About** tab provides general system information, such as the product name, version, and enables you to apply a unique identifier to this Streaming Gateway. From this tab you can also download an archive of the logs for troubleshooting purposes.

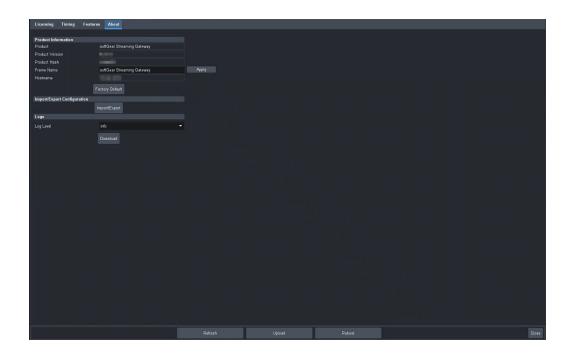


# **Accessing the SSG Interfaces in DashBoard**

The SSG interfaces are accessed by double-clicking the SSG sub-node. Use the SSG interfaces to configure the sources and destinations, enable connections, and monitor the traffic.


# To display the SSG interfaces in DashBoard

- 1. In the Basic Tree View of DashBoard, locate the softGear Streaming Gateway node.
- 2. Expand the **softGear Streaming Gateway** node.

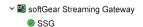


3. Double-click the SSG sub-node.

The **Connections Control** tab is automatically selected. This enables you to specify which connections are active (online) or not (offline), and monitor the connections.

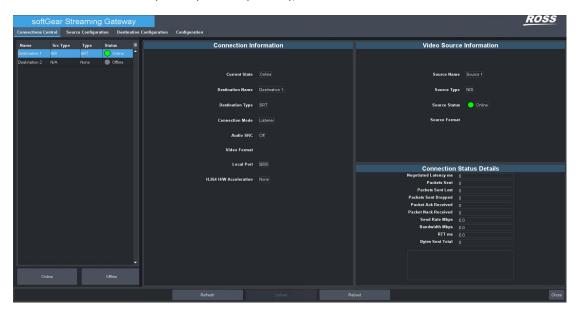


# 4. Select the **Source Configuration** tab.

The **Source Configuration** tab enables you to manage the input signals that the Streaming Gateway will have access to. The tab is organized into two panes. The left pane lists all the configured sources in a table format. Selecting a row in this table displays the options for the selected source in the right pane of the window.

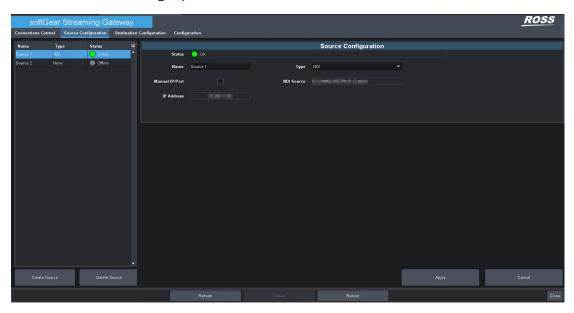

# 5. Select the **Destination Configuration** tab.


The **Destination Configuration** tab enables you to manage the output signals that the Streaming Gateway will have access to. The tab is organized into two panes. The left pane lists all the configured destinations in a table format. Selecting a row in this table displays the options for the selected destination in the right pane of the window.

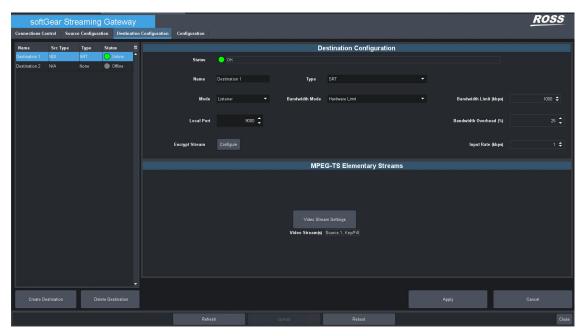

### 6. Select the **Configuration** tab.

From this tab you can access the Global Settings, API Control, Preset Connections, and About sub-tabs (located in the bottom toolbar). By default, the Global Settings sub-tab is automatically

selected. Refer to "**Configuration Tab**" for a detailed explanation of the options contained within each sub-tab.

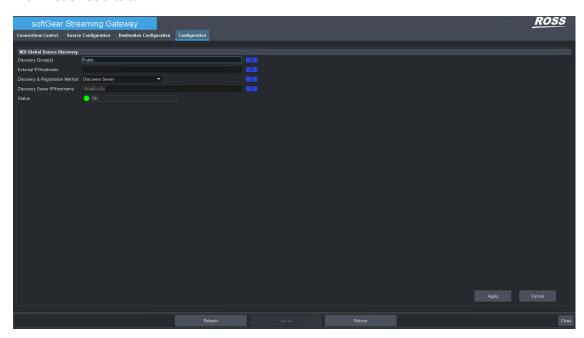

# **Upgrading the Software**

The Streaming Gateway can be upgraded in the field via DashBoard. Contact Ross Technical Support before upgrading from versions prior to v4.0. Refer to "**Contacting Ross Video Technical Support**" for contact details.

# **Configuring the NTP Settings**


The Streaming Gateway requires an accurate time reference to ensure correct watermarking and crediting. This chapter outlines how to set the system time of the Streaming Gateway.

# **Configuring the NTP Settings**

You have the option to set the current date and time on the system clocks of the Streaming Gateway by using a Network Time Protocol (NTP) server. This requires you to enter the IP address of up to two (2) NTP servers. The Streaming Gateway must be able to access these IP addresses to acquire the time from an NTP server.

# To set the system time of the Streaming Gateway

- 1. Display the **System** interface as outlined in "**To display the System interfaces in DashBoard**".
- 2. Select the **Timing** tab.

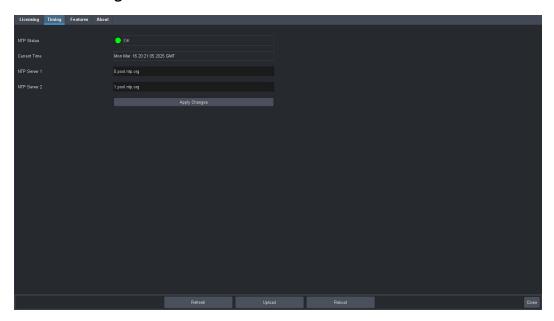

- 3. In the NTP Server 1 field, enter the IP address of the first NTP server you want to add.
- 4. If required, in the **NTP Server 2** field, enter the IP address of the second NTP server you want to add.
- 5. Click Apply Changes.
- 6. Wait until the Streaming Gateway is:
  - · synchronized to the new NTP server, and
  - the NTP Status field reports "OK".
- 7. If OK is not reported, check:
  - that the time displayed in the **Current Time** field is correct;
  - · that the IP address is correct;
  - that the Streaming Gateway has access to the address.



# **Configuring the Source for a Connection**

This chapter outlines how to configure the NDI sources (inputs) for the Streaming Gateway.

#### For More Information on...

- the Streaming Gateway destinations, refer to "Configuring the Destination for a Connection".
- managing your connections, refer to "Connection Management".

## Overview

Each connection is configured independently. Once all the sources are configured, you proceed to configure the SRT outputs (destinations).


**★** Audio is not supported by the Streaming Gateway in version 4.0.

# **Configuring the NDI Global Source Discovery**

The Global Settings sub-tab (located in the SSG > Configuration tab) provides options for NDI Global Source Discovery. If you are using a private group or an external server, ensure that the NDI Global Source Discovery is set accordingly.

## To configure the NDI Global Source Discovery on the Streaming Gateway

- Display the SSG sub-node in DashBoard as outlined in "Accessing the SSG Interfaces in DashBoard".
- 2. Select the **Configuration** tab.

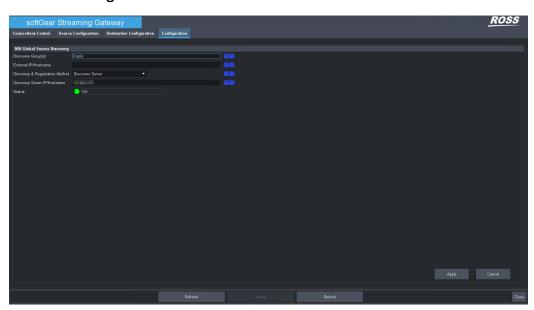

- **★** The **Discovery Group(s)** field is set to Public by default.
- **★** The **Discovery & Registration Method** is automatically set to Discovery Server. The NDI Discovery Server is a tool that allows NDI devices to perform discovery. The user is required to set up the NDI Discovery Server independently. Refer to "**Additional Software**".

- 3. Use the **Discovery Server IP/ Host name** field to specify the IP address or host name for the NDI discovery method.
- 4. Reboot the Streaming Gateway.
- \* After inputting the NDI Discovery Server IP address or host name, you must reboot the Streaming Gateway in order to connect to the NDI Discovery Server.
- 5. Monitor the **Status** field to ensure the Streaming Gateway establishes a valid connection to your NDI Discovery Server. Refer to **Table 15** for a list of possible messages.


# Specifying an NDI Stream as a Source

By default, there are two sources populated in DashBoard. You may edit one of these preexisting sources instead of creating a new one, if desired.

#### To specify an NDI stream as a source

- Display the Source Configuration interface as outlined in "Accessing the SSG Interfaces in DashBoard".
- Click Create Source.

A new row displays in the source table (left pane) and the DashBoard window updates to display the Source Configuration options (right pane).

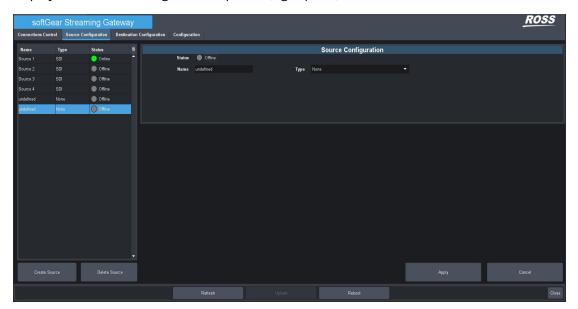


3. Use the **Name** field to assign a unique identifier to this source.

The source name is used to identify the available sources on the Destination Configuration tab.

4. Use the **Type** menu to select **NDI**.

The **Source Configuration** area updates to display options for configuring the source as an NDI stream.

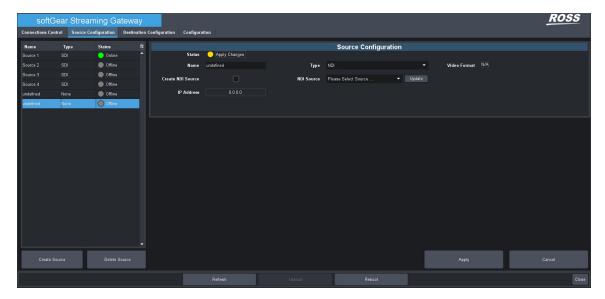

5. Click the **Update** button beside the **NDI Source** menu.

This refreshes the list of existing NDI sources.

6. Use the **NDI Source** menu to select the desired source.

The **IP Address** field populates with the IP address for the selected source.

- **★** If you want to create an NDI source instead of selecting an existing one, select the **Create NDI Source** box and manually fill the **IP Address** and **Port** fields.
- 7. Click Apply.

# Configuring the Destination for a Connection

Each connection requires an SRT destination and the video from a single NDI source. Each SRT destination is configured independently. This chapter outlines how to configure the SRT destinations (outputs) that will create connections for your Streaming Gateway.

# **Before You Begin**

To establish an SRT-to-SRT connection, one of the peers must operate in **Listener** mode while the other operates as **Caller**. The mode of operation for the peer is determined by network configuration. It is not important which mode either the source or destination operates in. Keep the following in mind:

- The SRT peer operating in **Listener** mode must be reachable over UDP on the port specified in the **Local Port** field for listener mode.
- The SRT peer operating in Caller mode simply calls the listener at the specified Target URL (Host:Port).

Refer to **Table 14** for further information on the menus and fields involved in assigning an SRT stream as the destination.


# Assigning an SRT Stream as the Destination

By default, there are two destinations populated in DashBoard. You may edit one of these preexisting destinations instead of creating a new one, if desired.

#### To assign an SRT stream as the destination


- 1. Display the **Destination Configuration** interface as outlined in "Accessing the SSG Interfaces in DashBoard".
- 2. Click Create Destination.

A new row displays in the destination table (left) and the DashBoard window updates to display the Destination Configuration settings for the new destination (right).

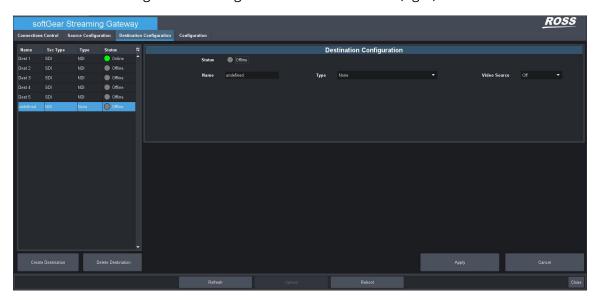


- 3. Use the **Name** field to assign a unique identifier to this destination.
  - This name is used to quickly identify connections on the Connections Control tab.
- 4. Use the **Type** menu to select **SRT**.

The **Destination Configuration** pane updates to display options for assigning an SRT stream as a destination.

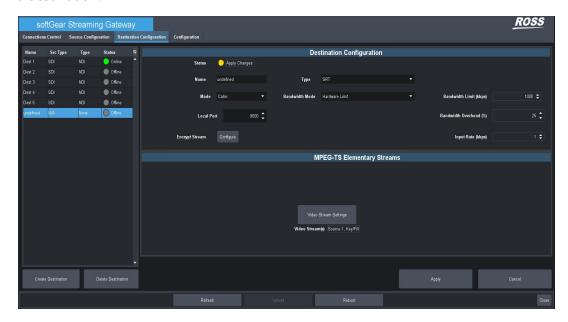

- 5. Use the **Mode** menu to select either **Caller** or **Listener**.
- 6. Use the **Bandwidth Mode** options to specify the Bandwidth limits. Choose from the following:
  - Hardware Limit The Streaming Gateway applies the ethernet port bandwidth as the limit.
  - Input Rate Limit The Input Rate and Bandwidth Overhead fields are now editable.
  - Manual Limit The Bandwidth Limit field is now editable.
- 7. If the **Bandwidth Mode** is set to **Manual Limit**, use the **Bandwidth Limit (kbps)** field to define the maximum sender bandwidth.
- 8. If the **Bandwidth Mode** is set to **Input Rate Limit**:
  - a. Use the **Bandwidth Overhead (%)** field to define the recovery bandwidth overhead.
  - b. Use the **Input Rate (kbps)** field to define the anticipated bitrate of your live stream.
- 9. Perform one of the following:
  - If the **Mode** selected in step 5 was **Caller**, use the **Target URL (Host:Port)** fields to define the port.
  - If the Mode selected in step 5 was Listener, use the Local Port field to define the port.
- 10. *(optional)* For configurations in which the Listener expects a specific Stream ID to be present, set the **Stream ID** field on the **Caller** to define the Stream ID for the connection.
- 11. Click Video Stream Settings.

The Video Stream Settings window opens.

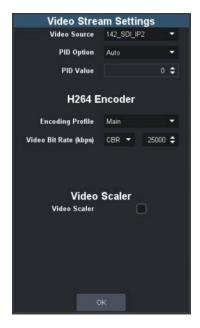

- 12. Use the **Video Source** menu to select the desired source.
- 13. Use the **PID Option** menu to select Auto or Custom.
- 14. Use the **PID Value** menu to set a custom PID value if the PID Option is set to Custom.
- 15. Use the **Encoding Profile** menu to select the H264 profile to be used.
- **★** If High 4:2:2 is enabled, Intel Quick Sync hardware acceleration will be disabled.
- 16. Use the **Video BitRate(kbps)** fields to define the video bitrate and mode.

#### To apply video scaling to the output video

1. Select the Video Scaler box.

The **Output Resolution** and **Output Frame Rate** menus display.

- 2. Use the **Resolution** menu to specify the resolution of the SRT signal.
- 3. Use the **Frame/Field Rate** menu to specify the frame rate of the SRT signal.
- 4. Select the **Interlaced** box to output interlaced video.
- ★ When this box is not selected, the output is progressive video. This option is only accessible for certain Resolution and Frame/Field Rate format combinations. Refer to **Table 14** for details.
- 5. Use the **Aspect Ratio Control** menu to set the aspect ratio to Letterbox/Pillarbox or Full Frame.
- 6. Select OK.

The Video Stream Settings window closes.

- 7. If you are using encryption, continue to "**To use encryption**".
- 8. If you are not using encryption, continue to "Connection Management".

#### To use encryption

1. Select the **Configure** button for **Encrypt Stream**.

The **Encrypt Stream** window opens.

2. Select the **Encrypt** box.

The **Key Length** menu and **Passphrase** field display.

3. Use the **Key Length** menu to select the desired key length to encrypt the data.

- 4. Use the **Passphrase** field to specify a string between 10-80 characters long.
- **★** The passphrase must match for both peers.
- 5. Select  $\mathbf{Exit}$  to close the  $\mathbf{Encrypt}$   $\mathbf{Stream}$  window.
  - The **Encrypt Stream** window closes.
- 6. Click **Apply**.

# **Connection Management**

Once the sources are configured, and the SRT destinations are assigned, you are ready to enable a connection. Enable each connection as required. This chapter outlines how to enable a connection, edit an existing connection, disable a connection, and delete a connection.

#### For More Information on...

- the sources for your connections, refer to "Configuring the Source for a Connection".
- the destinations for your connections, refer to "Configuring the Destination for a Connection".

# **Before You Begin**

By default, a new connection is disabled (the status is reported as Offline) to ensure that a change in settings does not disrupt any downstream equipment or user portals. You must manually enable each connection by toggling its Online button on the Connections Control tab.

# **Enabling a Connection**

Enabling a connection requires you to select it from the list of available connections, and click the **Online** button. The connection is then published to your downstream devices.

#### To enable a connection

- 1. Display the **Connections Control** tab in DashBoard as outlined in "**Accessing the SSG Interfaces in DashBoard**".
- 2. From the **Connections** table, select the row for the connection you wish to enable.
- 3. Click **Online** (located in the bottom left corner of the **Connections** table).

The **Status** fields for the source and destination update to report that the selected connection is now enabled.

# **Disabling a Connection**

Clicking the **Offline** button for a connection immediately stops that session and freezes the output. This is helpful:

- to free up bandwidth
- if the source is invalid or missing
- if the source includes data that you do not want to output
- · to update the connection settings

#### To disable a connection

- 1. Display the **Connections Control** tab in DashBoard as outlined in "Accessing the SSG Interfaces in DashBoard".
- 2. From the **Connections** table, select the row for the connection you wish to disable.
  - The **Selected Connection** area updates to display the settings for the connection.
- 3. Click **Offline** (located at the bottom of the **Connections** table).

The **Status** fields for the source and destination update to report that the selected connection is now disabled.

# **Editing an Existing Connection**

Before editing an existing connection, ensure that it is currently offline (disabled) and not in use by downstream equipment or user portals. A connection must be offline before it can be edited.

# To edit an existing connection

- 1. Disable the connection as outlined in "Disabling a Connection".
- 2. Edit the source for a connection using the steps in "Configuring the Source for a Connection".
- Edit the destination for a connection using the steps in "Configuring the Destination for a Connection".
- 4. Enable the connection as outlined in "Enabling a Connection".
- **★** If you no longer want to save changes made to the connection, click **Cancel** instead of **Apply**. This will revert any changed field to its previous state.

# **Deleting a Connection**

You cannot delete a connection that is currently online (active). You must first disable the connection, as outlined in "**To disable a connection**", before proceeding to delete it.

#### To delete a connection

- 1. Disable the connection as outlined in "Disabling a Connection".
- 2. Select the **Destination Configuration** tab.
- 3. From the **Destinations** table, select the row for the connection output you wish to delete.
- Click Delete Destination (located at the bottom of the Destinations table).
- **★** If the Source for the deleted connection is no longer used by any other connection, it can also be deleted by performing steps 3-4 under the **Source Configuration** tab.

# **Troubleshooting**

This section briefly summarizes some of the error messages that display on the Connections Control interface when creating the connections for your Streaming Gateway.

Table 2 Connections Control — Possible Error Messages

Message	Notes
Destination Does Not Have	• The output video source is not detected for a destination.
Output Video Enabled	<ul> <li>Verify that the Output Video box is selected on the destination Configuration interface for the destination.</li> </ul>
	<ul> <li>Refer to "Configuring the Destination for a Connection".</li> </ul>
Destination is Online	• The user attempted to edit a destination that was assigned to a connection that is currently online and in use.
	<ul> <li>You must first disable the associated connection before editing the destination.</li> </ul>
	<ul> <li>Refer to "Disabling a Connection" and "Editing an Existing Connection".</li> </ul>

Table 2 Connections Control — Possible Error Messages (Continued)

Message	Notes
Source is Online	The user attempted to edit a source that was assigned to a connection that is currently online and in use.
	You must first disable the associated connection before editing the source.
	<ul> <li>Refer to "Disabling a Connection" and "Editing an Existing Connection".</li> </ul>
Video Source is Invalid	• The user attempted to assign a video source that is not available (N/A).
	<ul> <li>Refer to "Configuring the Source for a Connection" and "Configuring the Destination for a Connection".</li> </ul>

# **DashBoard Interface Overview**

This chapter summarizes the interfaces, tabs, and menus available from DashBoard for the Streaming Gateway.

# **System Interfaces**

Double-clicking the System sub-node displays four tabs in the DashBoard window: Licensing, Timing, Features, and About. This section provide a summary of each tab.

# **Licensing Tab**

Use the options on the **Licensing** tab to manage the licensed features that require a valid Product Key. (**Figure 2**)

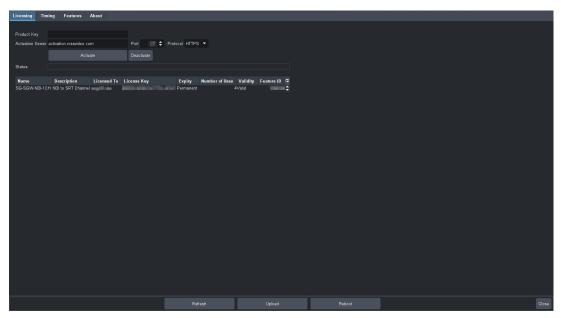


Figure 2 Example of the Licensing Tab

**Table 3** summarizes the options displayed in the **Licensing** tab.

Item	Parameters	Description
Product Key	#	Used to enter the Product Key in order to license the server
Activation Server	<text></text>	Used to enter the server the license must connect with to confirm its validity
Port	#	Used to select the Port for the Activation Server
Protocol	HTTP	Selects HTTP for the Activation Server
	HTTPS	Selects HTTPS for the Activation Server
Activate	Activates the entered Product Key	

Deactivates the Product Key

Table 3 System — Licensing

Deactivate

Table 3 System — Licensing (Continued)

Item	Parameters	Description
Status	<text></text>	<ul> <li>Can report the following:</li> <li>the validity of the Product Key used,</li> <li>the result of activation,</li> <li>and the result of checking the license per the interval defined by the licensing mode</li> </ul>
Name	<text></text>	Reports the marketing code for the feature
Description	<text></text>	Summarizes the licensed feature
Licensed To	#	Indicates the device the license applies to
License Key	#	A character string to obtain an Activation Key
Expiry	MM/YYYY	Reports the expiry date for the feature
Number of Uses	#	Represents the amount of docker containers set up and running for the specific feature
Validity	Valid/Invalid	Reports if the Activation Key is valid and the feature is still licensed or not
Feature ID	#	Provides the license code that you must provide to Ross Technical Support

# **Timing Tab**

The Timing tab provides options for configuring a connection to your facility NTP Server. (Figure 3)

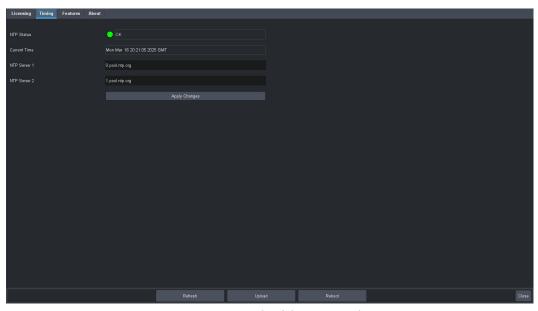


Figure 3 Example of the Timing Tab

**Table 4** summarizes the fields displayed in the **Timing** tab.

Table 4 System — Timing

Item	Parameters	Description
NTP Status (read-only)	OK (Green)	Indicates a valid time source is reporting to the Streaming Gateway
	Apply Changes (Yellow)	At least one NTP Server address has changed. Click Apply Changes to save the new setting(s).
	Not Running (Red)	Software was not able to start NTP client
	No Servers Configured (Red)	The NTP Server fields are blank
	Cannot Resolve Server Name (Red)	At least one of the NTP Server host-names could not be resolved. It is recommended to specify the IP address instead of a host-name for the server.
	No Time Server Available At Address (Red)	At least one NTP Server IP Address does not have a valid time server running
Current Time (read-only)	Ddd Mmm ## hh : mm : ss yyyy GMT	<ul> <li>Indicates the encoded date where:</li> <li>Ddd represents the day of the week</li> <li>Mmm represents the month</li> <li>## represents the day of the month</li> <li>hh: mm: ss reports the current encoding time as reported by the NTP Server(s)</li> <li>yyyy represents the year</li> </ul>
NTP Server 1	#	Specifies the first Network Time Server (NTP) address the Streaming Gateway can use for timecode information
NTP Server 2	#	Specifies an additional Network Time Server (NTP) address the Streaming Gateway can use for timecode information
Apply Changes	Applies any changes made	

# **Features Tab**

The **Features** tab enables you to monitor the Streaming Gateway features. (**Figure 4**)

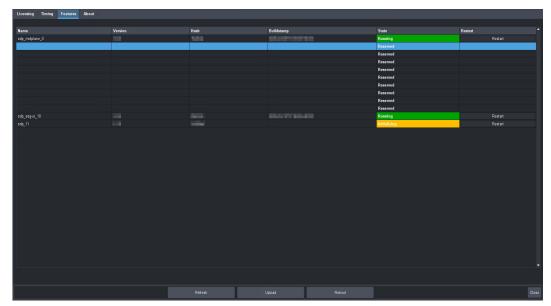


Figure 4 Example of the Features tab

**Table 5** summarizes the fields displayed in the **Features** tab.

Table 5 System — Features

	i and it is a special in	7 00000700
Item	Parameters	Description
Name	<text></text>	The name of the feature
Version	#	The version of the feature
Hash	<text></text>	The hash of the feature
Buildstamp	<text></text>	The buildstamp of the feature
State	<text></text>	The current status of the feature
Restart		Click the button to restart the feature

# **About Tab**

The About tab reports product information, manage your configuration files, and access the system logs. (**Figure 5**)

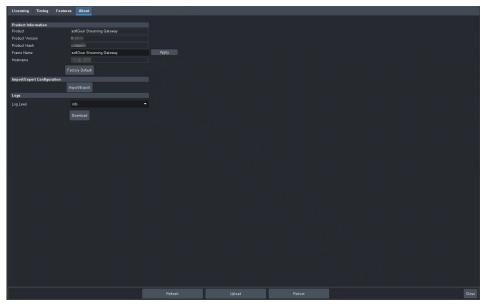


Figure 5 Example of the About Tab

**Table 6** summarizes the fields and read-only information displayed in the **About** tab.

## Table 6 System — About

ltem	Parameters	Description
Product Information	n	
Product (read-only)	softGear Streaming Gat	eway
Product Version (read-only)	<text></text>	The software build the Streaming Gateway is currently running
Product Hash (read-only)	<text></text>	The hash of the software build
Frame Name	<text></text>	<ul> <li>Assigns a unique identifier to the Streaming Gateway.</li> </ul>
		<ul> <li>This name displays in the node for the Streaming Gateway in the Tree View of DashBoard.</li> </ul>
		<ul> <li>The default is softGear Streaming Gateway.</li> </ul>
		<ul> <li>Note that any change to this name may take up to one minute to be reflected in the Tree View of DashBoard.</li> </ul>
Host name	#.#.#.#	Reports the IP address of the AWS EC2 instance
Factory Default	Reboots the Streaming factory default values.	Gateway and resets any editable fields to the
	This impacts all tabs exc	cept the Ethernet and About tabs.

Table 6 System — About (Continued)

Item	Parameters	Description
Import/Export Con	figuration	
Import/Export	Gateway to your computer, of configuration file from your export option allows you to your computer, while the improved configuration file onto trigger a reboot of the Stream	nat match the feature set of the currently
Logs		
Download	Exports an archive of the log computer	s to a specified location on your network or

# **SSG Interfaces**

Double-clicking the SSG sub-node displays four tabs in the DashBoard window: Connections Control, Source Configuration, Destination Configuration, and Configuration.

## **Connections Control Tab**

The Connections Control tab is organized into four panels (from left to right): a Connections table, Connection Information area, Video Source Information area, and Connection Status Details area. (**Figure 6**)

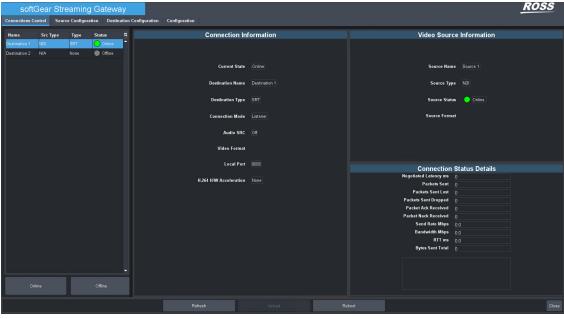


Figure 6 Example of the Connections Control Tab

## **Connections Table**

The Connections table reports a list of active and inactive connections that the user has configured using the Sources Configuration and Destinations Configuration tabs. Each table row is a

connection with the assigned source, destination, and a brief status message. Selecting a row displays more information in the other areas of the tab.

**Table 7** summarizes the read-only fields displayed in the **Connections** table.

Table 7 SSG — Connections Control — Connections Table

Item	Description
Name	Reports the destination assigned as the output for the connection
SRC Type	Identifies the signal type of the input of the connection
Type	Reports the signal type assigned to the destination
Status	Reports the connection status of the stream: online (green), offline (gray), or warning (yellow) of an error condition
Online	Select this button to enable the selected connection
Offline	Select this button to disable the selected connection

## Connection Information

**Table 8** summarizes the read-only fields displayed in the **Connection Information** area.

#### For More Information on...

- the available input options, refer to "Source Configuration Tab".
- the available output options, refer to "Destination Configuration Area".

Table 8 SSG — Connections Control — Connection Information

Item	Parameters	Description
Current State	Online	The connection is active and no errors are detected. The connection cannot be edited.
	Offline	The connection is inactive and can be edited
Destination Name	<text></text>	Reports the unique identifier assigned to the output signal of this connection. Used to identify the connection in the Manage Connections table.
Destination Type	SRT	Identifies the output of the connection as an SRT signal. Refer to <b>Table 14</b> for details.
Connection Mode	<text></text>	This field reports the connection mode that is assigned as the output for the connection
Video Format	#	Indicates the video format of the input signal. Displays when Video Scaler is not selected.
Resolution	#	Indicates the resolution set in the Output Video Settings. Displays when Video Scaler is selected.
Frame Rate	#	Indicates the frame rate set in the Output Video Settings. Displays when Video Scaler is selected.

Table 8 SSG — Connections Control — Connection Information (Continued)

Item	Parameters	Description
Host:Port	#	When the Mode is set to Caller, this field indicates the host and port used
Local Port	#	When the Mode is set to Listener, this field indicates the port used
H.264 H/W Acceleration	<text></text>	Reports if H.264 hardware acceleration Intel Quick Sync is in use

## Video Source Information

**Table 9** summarizes the read-only fields displayed in the **Video Source Information** area.

Table 9 SSG — Connections Control — Video Source Information

Item	Parameters	Description
Source Name	<text></text>	Reports the unique identifier assigned to the input signal of this connection
Source Type	SRT	Identifies the input of the connection as an SRT signal
Source Status	Online (Green)	The input signal is valid and no errors are detected
	No input signal detected (Yellow)	The specified stream is assigned as an input but a valid signal is not detected
	Initializing Signal (Yellow)	The Streaming Gateway is in the process of establishing a connection
	Closed to Signal Server	The input is unavailable.
	(Yellow)	The connection with the media server is no longer valid.
	Shared Memory Input	The input cannot be connected.
	Error (Red)	Toggling the Offline and Online buttons may fix this.
	Not Initialized (Red)	The input is no longer valid.
		Verify that a valid signal is available.
	Packets Missing (Red)	The input signal is experiencing errors.
		Verify if a valid signal is available.
	Offline (Gray)	The stream was stopped or is not yet initialized.
		Verify your network connections.
Source Format	#	Reports the input video format

## **Connection Status Details**

**Table 10** summarizes the read-only fields displayed in the **Connection Status Details** area.

Table 10 Connections Control — Connection Status Details

ltem	Parameters	Description
Negotiated Latency (ms)	#	Defines the minimum receiver buffering delay before sending an SRT data packet via this connection
Packets Sent	#	Reports the total number of packets transmitted by this connection
Packets Sent Lost	#	Reports the total number of missing packets transmitted by this connection
Packets Sent Dropped	#	Reports the total number of dropped packets transmitted by this connection
Packet ACK Received	#	Reports the total number of acknowledged packets that were transmitted by this connection and received by the downstream SRT device
Packet NACK Received	#	Reports the total number of packets that were transmitted by this connection but not received by the downstream SRT device
Send Rate (Mbps)	#	Reports the packets received by the Streaming Gateway and forwarded to the processor on the specified connection
Bandwidth (Mbps)	#	Reports the bandwidth utilization (to the nearest 100Mbps) sent from the processor to the network links on this connection
RRT (ms)	#	Reports the detected latency on your network (the number of milliseconds that passed from when the Streaming Gateway sent a network request was sent and an acknowledgment was received)
Bytes Sent Total	#	Reports the amount of data the Streaming Gateway sent on the specified connection since the Online button was selected

# **Source Configuration Tab**

The Source Configuration tab is organized into two areas (from left to right): a Sources table, and Source Configuration area. (**Figure 7**)

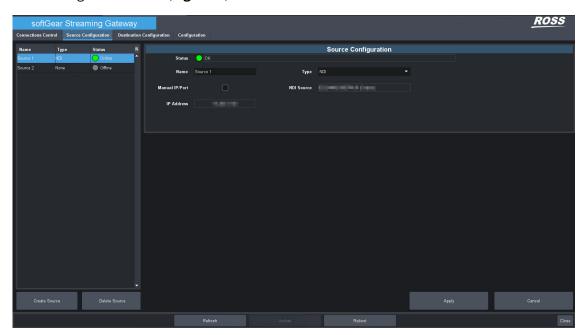


Figure 7 Example of the Source Configuration Tab

## Sources Table

The Sources table reports a list of active and inactive sources that the user has configured. Double-clicking a row displays more information in the Sources Configuration area.

**Table 11** summarizes the read-only fields displayed in the **Sources** table.

Table 11 SSG — Connections Control — Sources

Item	Description
Name	Reports the source assigned as the input signal for the connection
Туре	Reports the signal type assigned to the source
Status	Reports the connection status of the source: online (green), offline (gray), or warning (yellow) of an error condition.
Create Source	Select this button to define and add a new source to the database
Delete Source	Select this button to remove the selected source from the database

## **Sources Configuration**

**Table 12** summarizes the options when the **Type** is set to **NDI**.

Table 12 SSG — Source Configuration — Type > NDI

Item	Parameters	Description
Status (read-only)	Reports the status of the c warning (yellow), or error (	onnection: online (green), offline (gray), (red)
Name	<text></text>	Identifier assigned to the source connection

Table 12 SSG — Source Configuration — Type > NDI (Continued)

Item	Parameters	Description
Manual IP/Port	Selected	Allows you to create a new NDI source to use.  When selected, you must manually enter the IP address and port # of the desired source.
	Cleared	Indicates that the source to be used is preexisting
NDI Source	<text></text>	Selects an existing source to use as the NDI Source
	Update	Refreshes the list of existing NDI sources
IP Address	#	Reports the IP address of the selected source

# **Destination Configuration Tab**

The Destination Configuration tab is organized into two areas: a Destinations table, and the Destination Configuration area. (**Figure 8**)

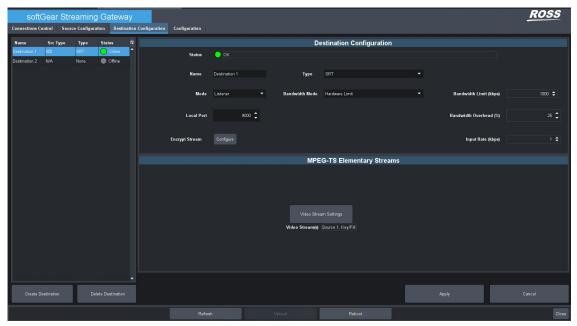


Figure 8 Example of the Destination Configuration Tab

## **Destinations Table**

The Destinations table reports a list of active and inactive destinations that the user has configured. Double-clicking a row displays more information in the Destinations Configuration area.

**Table 13** summarizes the read-only fields displayed in the **Destinations** table.

Table 13 SSG — Destination Configuration — Destinations

Item	Description
Name	Reports the destination assigned as the output signal for the connection

Table 13 SSG — Destination Configuration — Destinations (Continued)

Item	Description
Src Type	Reports the source signal type to this destination
Туре	Reports the signal type assigned to the destination
Status	Reports the connection status of the connection: online (green), offline (gray), or warning (yellow) of an error condition
Create Destination	Select this button to define and add a new destination to the database
Delete Destination	Select this button to remove the selected destination from the database

# **Destination Configuration Area**

**Table 14** summarizes the options when **Type** is set to **SRT**.

Table 14 SSG — Destination Configuration — Type > SRT

Item	Parameters	Description
Status (read-only)	Online (green)	Reports the status of the connection
	Warning (yellow)	
	Error (red)	
	Offline (gray)	
Name	<text></text>	Assigns a unique identifier to the connection
Mode	Listener	Indicates the mode for the source is set to Listener.  When in Listener mode, the Streaming Gateway is listening on a port to establish a connection.
	Caller	Indicates the mode for the source is set to Caller.  When in Caller mode, the Streaming Gateway sends out a message to the IP address and port to connect.
Bandwidth Mode	Hardware Limit	The Streaming Gateway applies the ethernet port bandwidth as the limit
	Input Rate Limit	The Input Rate and Bandwidth Overhead fields are now editable
	Manual Limit	The Bandwidth Limit field is now editable.
Bandwidth Limit (kbps)	#	This field is only editable when the Bandwidth Mode is set to Manual Limit.  Defines the maximum sender bandwidth.
Target URL (Host:Port)	<text>, #</text>	Available in Caller Mode. Specifies the target URL and port to be used.
Stream ID	<text></text>	Available in Caller Mode. Defines the Stream ID.

Table 14 SSG — Destination Configuration — Type > SRT (Continued)

Item	Parameters	Description
Bandwidth Overhead (%)	#	Defines the recovery bandwidth overhead percentage. The default is 25%. Only applicable when the Bandwidth Mode is set to Input Rate Limit.
Local Port	#	Available in Listener Mode. Specifies the local port to be used.
Input Rate (kbps)	#	Defines the anticipated bitrate of your live stream. Only applicable when the Bandwidth Mode is set to Input Rate Limit. The default is 0. When set to 0, the value used will be estimated from the rate of the input during transmission.
Video Stream Settin	gs	
Video Source	#	Provides a list of the available sources as defined using the Sources Configuration tab
PID Option	Auto	The PID value will be automatically set to the default one
	Custom	Allows you to customize the PID value
PID Value	#	Defines the PID value when the PID Option is set to Custom
H264 Encoder		
Encoding Profile	Main	Defines that the H264 profile used will be Main
	High 4:2:2	Defines that the H264 profile used will be High 4:2:2
Video Bit Rate (kbps)	CBR, #	Defines the video bitrate and its mode, CBR. CBR refers to constant bitrate, meaning the bitrate will be kept the same.
	VBR, #	Defines the video bitrate and its mode, VBR. VBR refers to variable bitrate, meaning the bitrate will vary. The value is the maximum bitrate allowed.
Video Scaler		
Video Scaler	Selected	The video output will be scaled.
	Cleared	The video output will not be scaled.
Resolution	# x #	Selects the desired resolution for the output. Only displays when Video Scaler is selected.
Frame/Field Rate	#	Selects the desired frame rate for the output. Only displays when Video Scaler is selected.

Table 14 SSG — Destination Configuration — Type > SRT (Continued)

Item	Parameters	Description
Interlaced	Selected	The video output will be interlaced. Only displays when Video Scaler is selected, and is only selectable using the following Resolution and Frame/Field Rate format combinations:  • 640x 480 and 59.94  • 768x576 and 50  • 1920x1080 and 50  • 1920x1080 and 59.94
	Cleared	The video output will be progressive. Only displays when Video Scaler is selected, and is only selectable using the following Resolution and Frame/Field Rate format combinations:  • 640x 480 and 59.94  • 768x576 and 50  • 1920x1080 and 50  • 1920x1080 and 59.94
Aspect Ratio Control	Letterbox/Pillarbox	A letterbox will be added to the output video when the output aspect ratio is less than the input aspect ratio.  A pillarbox will be added to the output video when the output aspect ratio is greater than the input aspect.  Only applies when the video scaler is selected and the output aspect ratio of the video scaler is different from the input aspect ratio.
	Full Frame	The output video will be cut to fit in the full frame.  Only applies when the video scaler is selected and the output aspect ratio of the video scaler is different from the input aspect ratio.

# **Configuration Tab**

The Configuration tab enables you to configure NDI Global Source Discovery for the Streaming Gateway. (**Figure 9**)

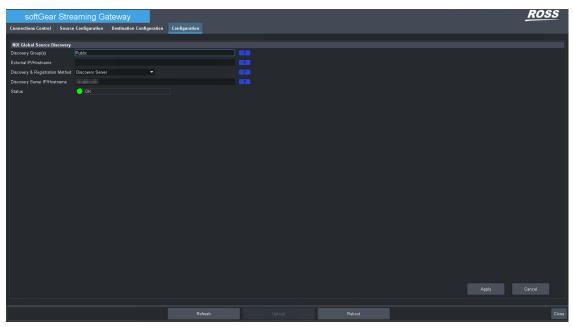


Figure 9 Example of the Configuration Tab

**Table 15** summarizes the options displayed in the **Configuration** tab.

Table 15 SSG — Configuration

Item	Parameters	Description
NDI Global Source D	iscovery	
Discovery Group	Public	Identifies the NDI Discovery Group used
External IP/ Host name	#	Identifies the IP address or host name used to discover sources when the SSG is operating in the cloud
Discovery & Registration Method	Discovery Server	The NDI Discovery Server is a tool that allows NDI devices to perform discovery.  The user is required to set up the NDI discovery server independently. Refer to the NDI SDK documentation for setup details.
Discovery Server IP/ Host name	#	This field identifies the IP address or host name for the NDI discovery method.  After inputting the server IP address or host name, the user must reboot their device in order to connect to the server.

Table 15 SSG — Configuration (Continued)

Item	Parameters	Description
Status (read-only)	OK	There is no Discovery Server connected
		NDI receiver and sender successfully connected to the Discovery Server
	Apply Changes	There are unsaved changes. Click <b>Apply</b> to apply the changes.
	Internal error reaching discovery server	NDI receiver had an SSG internal error on attempting to reach the NDI Discovery Server
	Lookup failure on discovery server name	NDI receiver had a DNS lookup failure for NDI Discovery Server
	Discovery server not reachable	NDI receiver cannot reach the Discovery Server
	Failure to query discovery server	NDI receiver had an internal error querying the Discover Server
	No response from discovery server	NDI receiver connected to the Discovery Server but received no response
	Unexpected response from discovery server	NDI receiver connected to the Discover Server but received an unexpected response

# **Third Party Licenses**

This chapter contains licenses for third party libraries that are used in the softGear Streaming Gateway.

## dbus

Copyright (c) 2013, Georg Reinke (<guelfey at gmail dot com>), Google

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### dhkx

Apache License

Version 2.0, January 2004

http://www.apache.org/licenses/

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

#### 2. Grant of Copyright License.

Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sub license, and distribute the Work and such Derivative Works in Source or Object form.

#### 3. Grant of Patent License.

Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.

#### 4. Redistribution.

You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:

- (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and
- (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
- (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
- (d) If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

#### 5. Submission of Contributions.

Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions.

Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.

#### 6. Trademarks.

This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.

### 7. Disclaimer of Warranty.

Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

#### 8. Limitation of Liability.

In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

#### 9. Accepting Warranty or Additional Liability.

While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting

such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

#### **END OF TERMS AND CONDITIONS**

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets "[]" replaced with your own identifying information. (Don't include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same "printed page" as the copyright notice for easier identification within third-party archives.

Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at http://www.apache.org/licenses/LICENSE-2.0

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

## Docker

Apache License

Version 2.0, January 2004

http://www.apache.org/licenses/

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

#### 1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

#### 2. Grant of Copyright License.

Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sub license, and distribute the Work and such Derivative Works in Source or Object form.

#### 3. Grant of Patent License.

Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use,

offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.

#### 4. Redistribution.

You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:

- (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and
- (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
- (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
- (d) If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

#### 5. Submission of Contributions.

Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.

#### 6. Trademarks

This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.

## 7. Disclaimer of Warranty.

Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

## 8. Limitation of Liability.

In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

#### 9. Accepting Warranty or Additional Liability.

While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

## END OF TERMS AND CONDITIONS

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets "[]" replaced with your own identifying information. (Don't include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same "printed page" as the copyright notice for easier identification within third-party archives.

Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at http://www.apache.org/licenses/LICENSE-2.0

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

#### WebRTC

FILENAME: LICENSE

\_\_\_\_\_

Copyright (c) 2011, The WebRTC project authors. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- \* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- \* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- \* Neither the name of Google nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### Haivision SRT

Mozilla Public License Version 2.0

1. Definitions

\_\_\_\_\_

- 1.1. "Contributor" means each individual or legal entity that creates, contributes to the creation of, or owns Covered Software.
- 1.2. "Contributor Version" means the combination of the Contributions of others (if any) used by a Contributor and that particular Contributor's Contribution.
- 1.3. "Contribution" means Covered Software of a particular Contributor.
- 1.4. "Covered Software" means Source Code Form to which the initial Contributor has attached the notice in Exhibit A, the Executable Form of such Source Code Form, and Modifications of such Source Code Form, in each case including portions thereof
- 1.5. "Incompatible With Secondary Licenses" means (a) that the initial Contributor has attached the notice described in Exhibit B to the Covered Software; or (b) that the Covered Software was made available under the terms of version 1.1 or earlier of the License, but not also under the terms of a Secondary License.
- 1.6. "Executable Form" means any form of the work other than Source Code Form.
- 1.7. "Larger Work" means a work that combines Covered Software with other material, in a separate file or files, that is not Covered Software.
- 1.8. "License" means this document.
- 1.9. "Licensable" means having the right to grant, to the maximum extent possible, whether at the time of the initial grant or subsequently, any and all of the rights conveyed by this License.
- 1.10. "Modifications" means any of the following:
- (a) any file in Source Code Form that results from an addition to, deletion from, or modification of the contents of Covered Software; or
- (b) any new file in Source Code Form that contains any Covered Software.
- 1.11. "Patent Claims" of a Contributor means any patent claim(s), including without limitation, method, process, and apparatus claims, in any patent Licensable by such Contributor that would be infringed, but for the grant of the License, by the making, using, selling, offering for sale, having made, import, or transfer of either its Contributions or its Contributor Version.

- 1.12. "Secondary License" means either the GNU General Public License, Version 2.0, the GNU Lesser General Public License, Version 3.0, or any later versions of those licenses.
- 1.13. "Source Code Form" means the form of the work preferred for making modifications.
- 1.14. "You" (or "Your") means an individual or a legal entity exercising rights under this License. For legal entities, "You" includes any entity that controls, is controlled by, or is under common control with You. For purposes of this definition, "control" means (a) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (b) ownership of more than fifty percent (50%) of the outstanding shares or beneficial ownership of such entity.
- 2. License Grants and Conditions

-----

#### 2.1. Grants

Each Contributor hereby grants You a world-wide, royalty-freestone-exclusive license:

- (a) under intellectual property rights (other than patent or trademark) Licensable by such Contributor to use, reproduce, make available, modify, display, perform, distribute, and otherwise exploit its Contributions, either on an unmodified basis, with Modifications, or as part of a Larger Work; and
- (b) under Patent Claims of such Contributor to make, use, sell, offer for sale, have made, import, and otherwise transfer either its Contributions or its Contributor Version.

#### 2.2. Effective Date

The licenses granted in Section 2.1 with respect to any Contribution become effective for each Contribution on the date the Contributor first distributes such Contribution.

#### 2.3. Limitations on Grant Scope

The licenses granted in this Section 2 are the only rights granted under this License. No additional rights or licenses will be implied from the distribution or licensing of Covered Software under this License.

Notwithstanding Section 2.1(b) above, no patent license is granted by a Contributor:

- (a) for any code that a Contributor has removed from Covered Software; or
- (b) for infringements caused by: (i) Your and any other third party's modifications of Covered Software, or (ii) the combination of its Contributions with other software (except as part of its Contributor Version); or
- (c) under Patent Claims infringed by Covered Software in the absence of its Contributions.

This License does not grant any rights in the trademarks, service marks, or logos of any Contributor (except as may be necessary to comply with the notice requirements in Section 3.4).

#### 2.4. Subsequent Licenses

No Contributor makes additional grants as a result of Your choice to distribute the Covered Software under a subsequent version of this License (see Section 10.2) or under the terms of a Secondary License (if permitted under the terms of Section 3.3).

#### 2.5. Representation

Each Contributor represents that the Contributor believes its Contributions are its original creation(s) or it has sufficient rights to grant the rights to its Contributions conveyed by this License.

#### 2.6. Fair Use

This License is not intended to limit any rights You have under applicable copyright doctrines of fair use, fair dealing, or other equivalents.

#### 2.7. Conditions

Sections 3.1, 3.2, 3.3, and 3.4 are conditions of the licenses granted in Section 2.1.

#### 3. Responsibilities

-----

#### 3.1. Distribution of Source Form

All distribution of Covered Software in Source Code Form, including any Modifications that You create or to which You contribute, must be under the terms of this License. You must inform recipients that the Source Code Form of the Covered Software is governed by the terms of this License, and how they can obtain a copy of this License. You may not attempt to alter or restrict the recipients' rights in the Source Co Deform.

#### 3.2. Distribution of Executable Form

If You distribute Covered Software in Executable Form then:

(a) such Covered Software must also be made available in Source Code Form, as described in Section 3.1, and You must inform recipients of the Executable Form how they can obtain a copy of such Source Code Form by reasonable means in a timely manner, at a charge no more than the cost of distribution to the recipient; and

(b) You may distribute such Executable Form under the terms of this License, or sub license it under different terms, provided that the license for the Executable Form does not attempt to limit or alter the recipients' rights in the Source Code Form under this License.

#### 3.3. Distribution of a Larger Work

You may create and distribute a Larger Work under terms of Your improvidence that You also comply with the requirements of this License forth Covered Software. If the Larger Work is a combination of Covered Software with a work governed by one or more Secondary Licenses, and the Covered Software is not Incompatible With Secondary Licenses, this License permits You to additionally distribute such Covered Software under the terms of such Secondary License(s), so that the recipient of the Larger Work may, at their option, further distribute the Covered Software under the terms of either this License or such Secondary License(s).

#### 3.4. Notices

You may not remove or alter the substance of any license notices (including copyright notices, patent notices, disclaimers of warranty limitations of liability) contained within the Source Code Form of the Covered Software, except that You may alter any license notices tithe extent required to remedy known factual inaccuracies.

#### 3.5. Application of Additional Terms

You may choose to offer, and to charge a fee for, warranty, supportability or liability obligations to one or more recipients of Covered Software. However, You may do so only on Your own behalf, and not on behalf of any Contributor. You must make it absolutely clear that any such warranty, support, indemnity, or liability obligation is offered by You alone, and You hereby agree to indemnify every Contributor for any liability incurred by such Contributor as a result of warranty, supportability or liability terms You offer. You may include additional disclaimers of warranty and limitations of liability specific to any jurisdiction.

4. Inability to Comply Due to Statute or Regulation

-----

If it is impossible for You to comply with any of the terms of this License with respect to some or all of the Covered Software due to statute, judicial order, or regulation then You must: (a) comply withe terms of this License to the maximum extent possible; and (b) describe the limitations and the code they affect. Such description must be placed in a text file included with all distributions of the Covered Software under this License. Except to the extent prohibited by statute or regulation, such description must be sufficiently detailed for recipient of ordinary skill to be able to understand it.

#### 5. Termination

-----

- 5.1. The rights granted under this License will terminate automatically if You fail to comply with any of its terms. However, if You become compliant, then the rights granted under this License from a particular Contributor are reinstated (a) provisionally, unless and until such Contributor explicitly and finally terminates Your grants, and (b) on an ongoing basis, if such Contributor fails to notify You of the non-compliance by some reasonable means prior to 60 days after You have come back into compliance. Moreover, Your grants from a particular Contributor are reinstated on an ongoing basis if such Contributor notifies You of the non-compliance by some reasonable means, this is the first time You have received notice of non-compliance with this License from such Contributor, and You become compliant prior to 30 days after Your receipt of the notice.
- 5.2. If You initiate litigation against any entity by asserting a patent infringement claim (excluding declaratory judgment counteraction-claims, and cross-claims) alleging that a Contributor Version directly or indirectly infringes any patent, then the rights granted to You by any and all Contributors for the Covered Software under Section 2.1 of this License shall terminate
- 5.3. In the event of termination under Sections 5.1 or 5.2 above, all end user license agreements (excluding distributors and resellers) which have been validly granted by You or Your distributors under this License prior to termination shall survive termination.

*********	**********	*****
* 6. Disclaimer of Warranty	*	
1.		

- \* Covered Software is provided under this License on an "as is" basis, without warranty of any kind, either expressed, implied, or statutory, including, without limitation, warranties that the Covered Software is free of defects, merchantable, fit for a particular purpose or non-infringing. The entire risk as to the quality and performance of the Covered Software is with You.
- \* Should any Covered Software prove defective in any respect, You (not any Contributor) assume the cost of any necessary servicing, repair, or correction. This disclaimer of warranty constitutes an essential part of this License. No use of any Covered Software is authorized under this License except under this disclaimer.

•	*
***********	**********
*******	**********

7.	. Limitation of Liability	*
*		*

\* Under no circumstances and under no legal theory, whether tort (including negligence), contract, or otherwise, shall any Contributor, or anyone who distributes Covered Software as permitted above, be liable to You for any direct, indirect, special, incidental, or consequential damages of any character including, without limitation, damages for lost profits, loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses, even if such party shall have been informed of the possibility of such damages. This limitation of liability shall not apply to liability for death or personal injury resulting from such party's negligence to the extent applicable law prohibits such limitation. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion and limitation may not apply to You.

\*

#### 8. Litigation

\_\_\_\_\_

Any litigation relating to this License may be brought only in the courts of a jurisdiction where the defendant maintains its principal place of business and such litigation shall be governed by laws of that jurisdiction, without reference to its conflict-of-law provisions.

Nothing in this Section shall prevent a party's ability to bring cross-claims or counter-claims.

#### 9. Miscellaneous

-----

This License represents the complete agreement concerning the subject matter hereof. If any provision of this License is held to be unenforceable, such provision shall be reformed only to the extent necessary to make it enforceable. Any law or regulation which provides that the language of a contract shall be construed against the drafter shall not be used to construe this License against a Contributor.

10. Versions of the License

-----

#### 10.1. New Versions

Mozilla Foundation is the license steward. Except as provided in Section10.3, no one other than the license steward has the right to modify or publish new versions of this License. Each version will be given distinguishing version number.

#### 10.2. Effect of New Versions

You may distribute the Covered Software under the terms of the version of the License under which You originally received the Covered Software under the terms of any subsequent version published by the license steward.

#### 10.3. Modified Versions

If you create software not governed by this License, and you want to create a new license for such software, you may create and use modified version of this License if you rename the license and remove any references to the name of the license steward (except to note that such modified license differs from this License).

10.4. Distributing Source Code Form that is Incompatible With Secondary Licenses

If You choose to distribute Source Code Form that is Incompatible With Secondary Licenses under the terms of this version of the License, the notice described in Exhibit B of this License must be attached.

Exhibit A - Source Code Form License Notice

-----

This Source Code Form is subject to the terms of the Mozilla Public License, v. 2.0. If a copy of the MPL was not distributed with this file, You can obtain one at http://mozilla.org/MPL/2.0/.

If it is not possible or desirable to put the notice in a particular file, then You may include the notice in a location (such as a License file in a relevant directory) where a recipient would be likely to look for such a notice.

You may add additional accurate notices of copyright ownership.

Exhibit B - "Incompatible With Secondary Licenses" Notice

-----

This Source Code Form is "Incompatible With Secondary Licenses", as defined by the Mozilla Public License, v. 2.0.

#### httprouter

BSD 3-Clause License Copyright (c) 2013, Julien Schmidt All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS"AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THEIMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AREDISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLEFOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIALDAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS ORSERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVERCAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USEOF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### **IXWebSocket**

Copyright (c) 2018 Machine Zone, Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHTHOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOTLIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### libsamplerate

Copyright (c) 2012-2016, Erik de Castro Lopo <erikd@mega-nerd.com>

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR APARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### mongo-driver

Apache License
Version 2.0, January 2004
http://www.apache.org/licenses/

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

#### 2. Grant of Copyright License.

Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sub license, and distribute the Work and such Derivative Works in Source or Object form.

#### 3. Grant of Patent License.

Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.

#### 4. Redistribution.

You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:

- (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and
- (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
- (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
- (d) If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

#### 5. Submission of Contributions.

Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.

#### 6. Trademarks.

This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.

#### 7. Disclaimer of Warranty.

Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

#### 8. Limitation of Liability.

In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

#### 9. Accepting Warranty or Additional Liability.

While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

#### **END OF TERMS AND CONDITIONS**

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets "[]" replaced with your own identifying information. (Don't include the brackets!. The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same "printed page" as the copyright notice for easier identification within third-party archives.

#### Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at http://www.apache.org/licenses/LICENSE-2.0

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

## nlohmann/json

#### MIT License

Copyright (c) 2013-2022 Niels Lohmann

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to dealing the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sub license, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS ORIMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

#### OpenSLP

The following copyright and license is applicable to the entire OpenSLP project (libslp, slpd, and related documentation): Copyright © 2000 Caldera Systems, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

Neither the name of Caldera Systems nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE CALDERA SYSTEMS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## spdlog

The MIT License (MIT)

Copyright (c) 2016 Gabi Melman.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to dealing the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sub license, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON INFRINGEMENT. IN NO EVENT SHALL THEAUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM,OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

-- NOTE: Third party dependency used by this software --

This software depends on the fmt lib (MIT License), and users must comply to its license: https://github.com/fmtlib/fmt/blob/master/LICENSE.rst

### zmq4

Copyright (c) 2013-2018, Peter Kleiweg

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "ASIS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITEDTO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR APARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, ORPROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OFLIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THISSOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

# **Glossary**

The following terms are used throughout this guide:

**DashBoard** — refers to the DashBoard Control System.

**Destination** — refers to the output.

**DHCP** — refers to Dynamic Host Configuration Protocol.

**EFA** — refers to Elastic Fabric Adapter.

**NTP** — refers to Network Time Protocol.

**Operator** and **User** — refer to the person who uses the Streaming Gateway.

**RPM** — refers to the Ross Platform Manager.

**Source** — refers to the input.

**Tree View** — refers to the area located to the far left of the DashBoard window. This area displays devices in a tree structure.

**URI** — refers to Uniform Resource Identifier.